





SEAT ADAPTER KIT #88215 INSTALLATION INSTRUCTIONS



2888-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

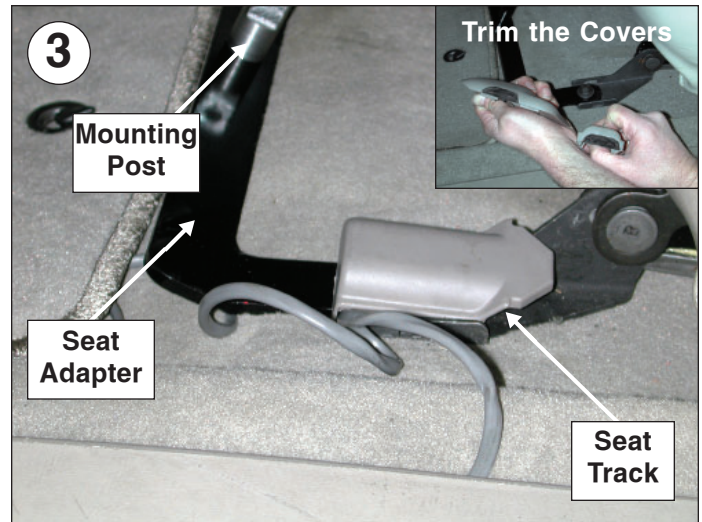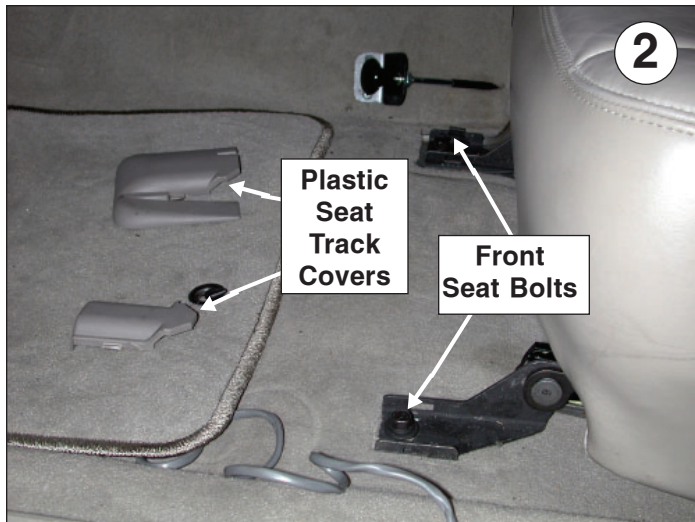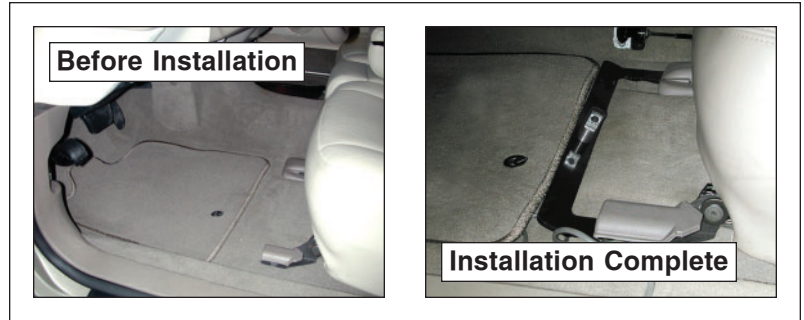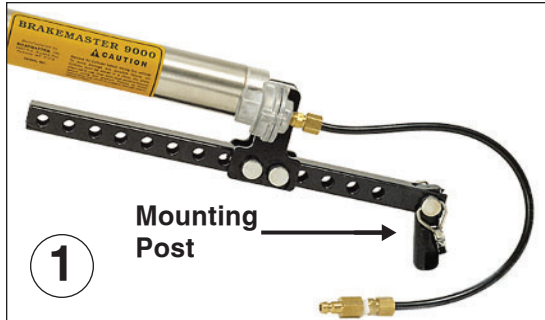

Instructions

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the plastic covers over each front seat track, then unscrew the two front seat bolts.
- 3.** Slide the seat adapter onto the seat track, over the front seat bolt holes. Then bolt the seat adapter in place, using the factory bolts you removed in the previous step. Tighten the bolts.
- 4.** Test-fit the plastic covers and trim the edges as necessary. (Use the black marks in the inset, Figure 3, as a reference.) Then, replace the covers. *Note:* for some vehicles, the seat must be raised to the full upright position before adjusting it to the full forward position.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.