



# SEAT Adapter KIT #88217 INSTALLATION INSTRUCTIONS



4508-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

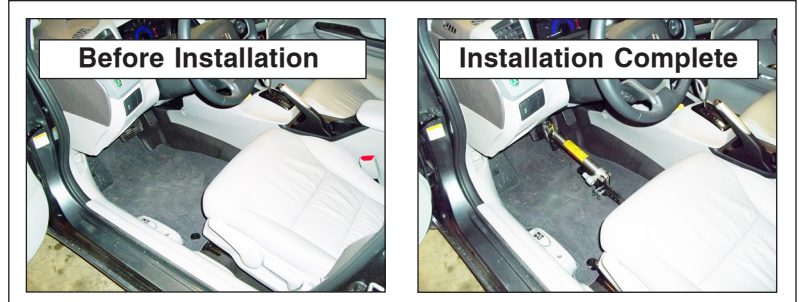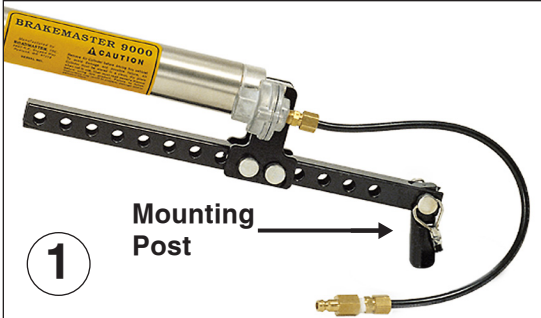

## Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove the two 14mm (head) front seat track bolts (Fig.2).
3. Place the two 1" x 1 1/2" .219 wall pipe spacers over the seat tracks. Place the seat adapter over the pipe spacers. *Note:* the mounting post on the adapter must be directly in line with the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Bolt through the seat adapter, pipe spacers, seat tracks and into the floor using the two supplied 10mm x 1.25 x 60mm bolts, 10mm lock washers, and fender washers (Fig.3).
4. Attach the air cylinder arm to the seat adapter.

### Parts List

- (2) 10mm x 1.25 x 60mm bolts
- (2) 10mm flat washers
- (2) 10mm lock washers
- (2) 10mm fender washers
- (2) 1" x 1 1/2" .219 wall pipe spacers
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.