





SEAT ADAPTER KIT #88218 INSTALLATION INSTRUCTIONS



2871-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

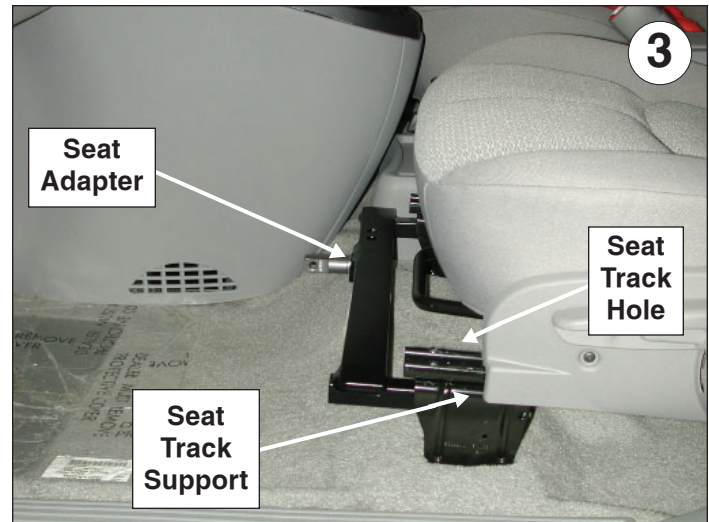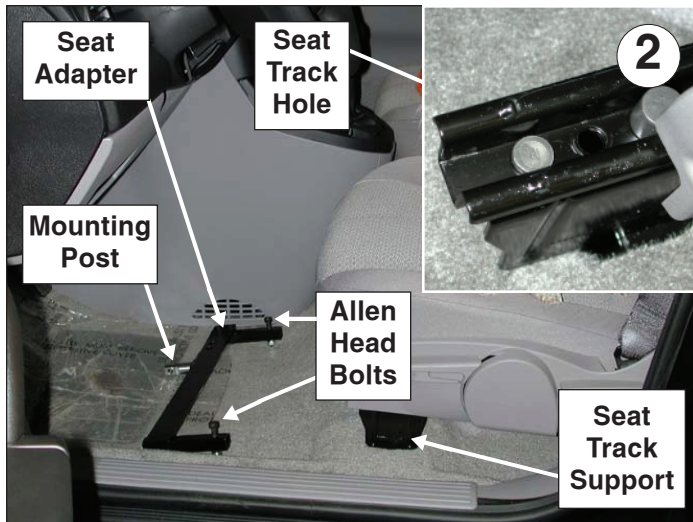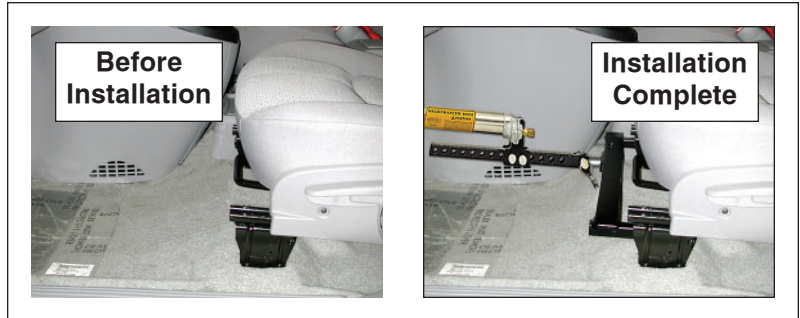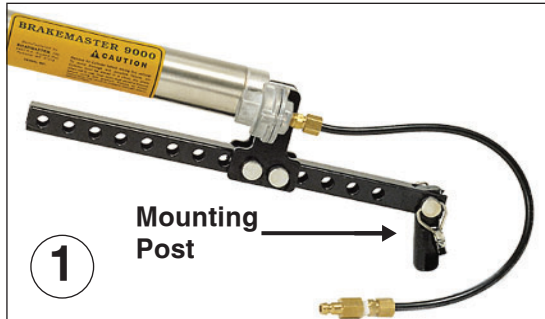

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Then, secure the mounting post to the center of the seat adapter, using the included 3/8" x 3/4" bolt and 3/8" lock washer. Insert the two 45mm x 8mm Allen head bolts through the top of the holes in each seat

3. Then, insert the seat adapter through the seat track supports. Tighten the Allen head bolts, with the supplied 8mm x 1.25 nuts and the 8mm lock washers, through the seat track hole.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 8mm x 1.25 x 45mm Allen head bolts
- (2) 8mm lock washers
- (2) 8mm x 1.25 nuts



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.