




SEAT ADAPTER KIT #88232 INSTALLATION INSTRUCTIONS



2950-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

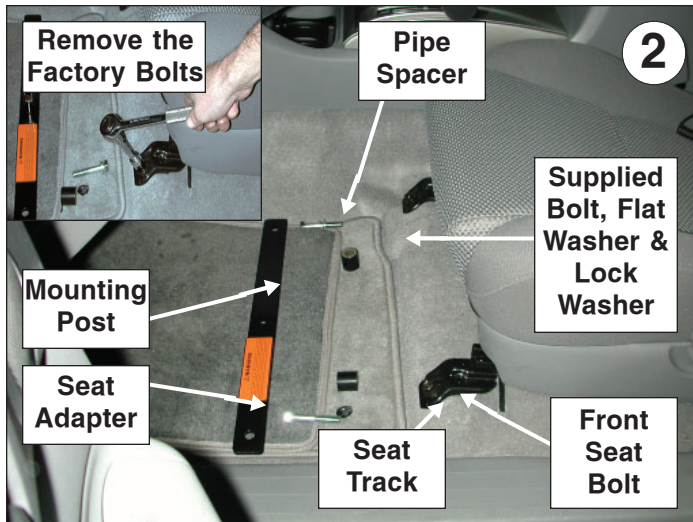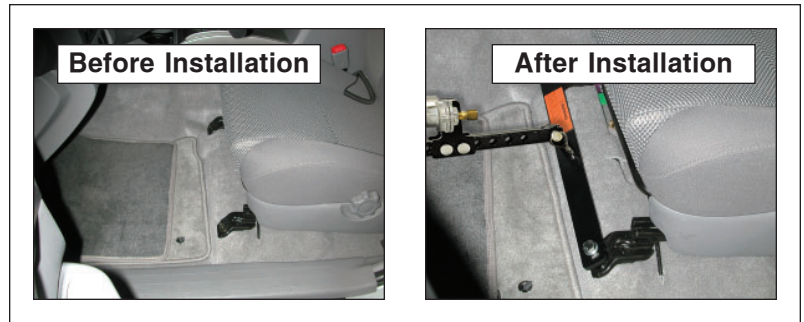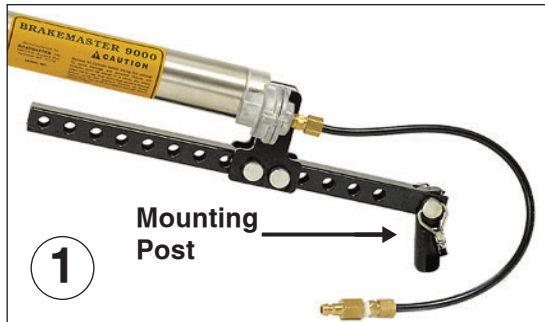

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 1" x 1" pipe spacers
- (2) 10mm x 1.25 x 60mm bolts
- (2) 10mm flat washers
- (2) 10mm lock washers

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the 14mm head front seat bolts (inset, Fig.2). Slide the seat adapter over the front seat bolt holes (Fig.2), and bolt the adapter into place using a 10mm x 1.25 x 60mm bolt, flat washer and lock washer on each side. Position a pipe spacer (on each side) between the seat adapter and the seat track.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.