





SEAT ADAPTER KIT #88233 INSTALLATION INSTRUCTIONS



3653-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

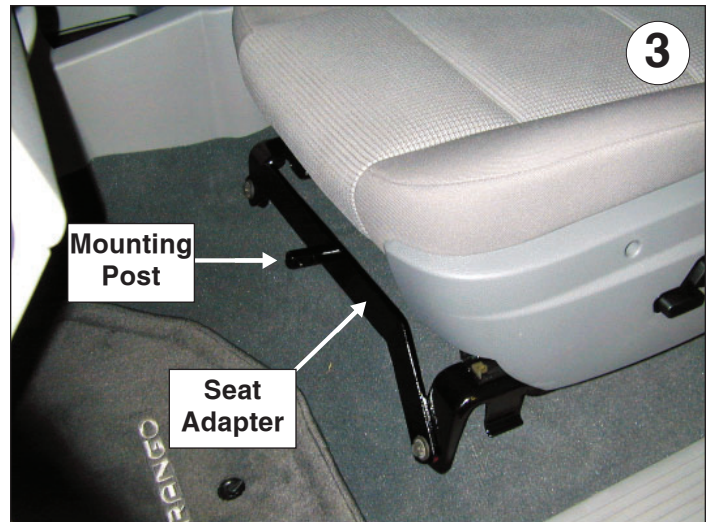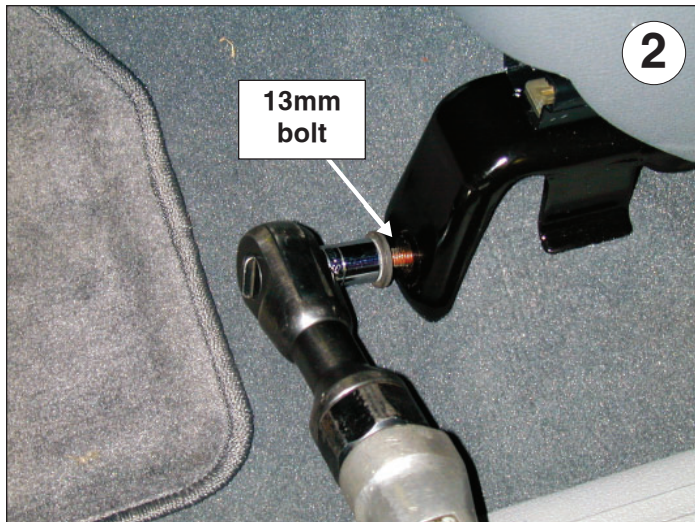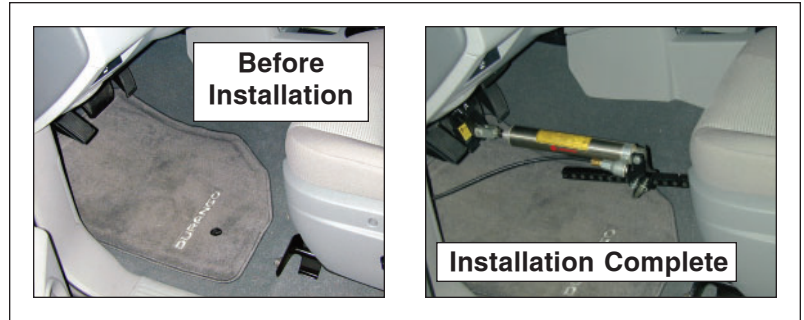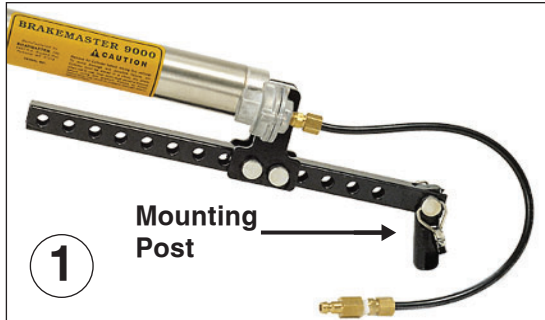

Instructions

1. Locate the mounting post (Fig.1) that came with your Brake-Master. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove the two 13mm front seat track bolts (one on each side, Fig.2). Set the seat adapter in place, so that the pre-drilled holes at each end of the seat adapter align to the holes for the 13mm bolts you removed, and the mounting post (Fig.3) is in a direct line to the brake pedal. Re-install the two 13mm front seat track bolts to secure the adapter in place.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.