



SEAT ADAPTOR KIT #88239 INSTALLATION INSTRUCTIONS



3863-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE


ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

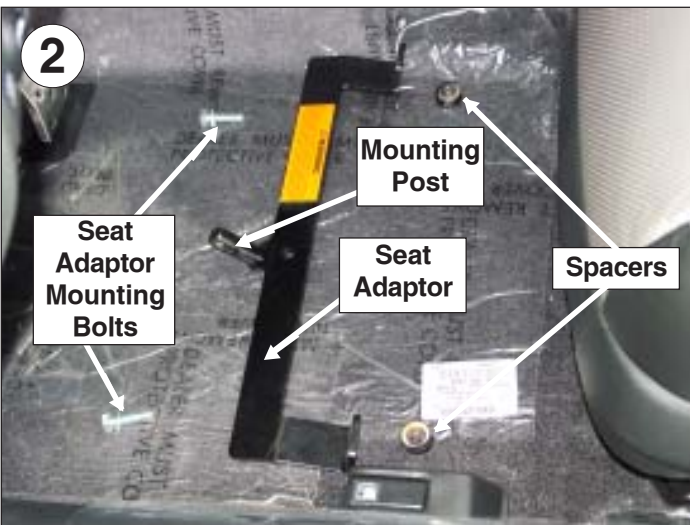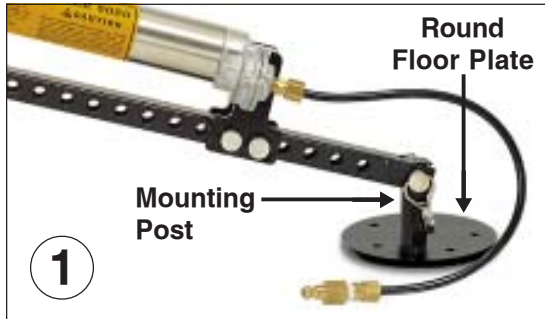

- ### Parts List
- (1) 3/8" lock washer
 - (1) 3/8" x 3/4" bolt
 - (2) 10mm x 1.25 x 35mm bolt
 - (2) 10mm lock washer
 - (2) 3/8" x 1" x .188 wall pipe spacer

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
2. Remove the stock 14mm (head) bolts from the front of the seat track. Now, bolt the seat adaptor in place with the 10mm x 1.25 x 35mm bolts, lock washers and the 3/8" x 1" x .188 wall pipe spacers (place the spacers between the seat track and seat adaptor).

 **WARNING** Failure to follow these instructions can result in property damage, personal injury or even death.