



1-800-669-9690



SEAT ADAPTOR KIT #88240 INSTALLATION INSTRUCTIONS



Part# 3391-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

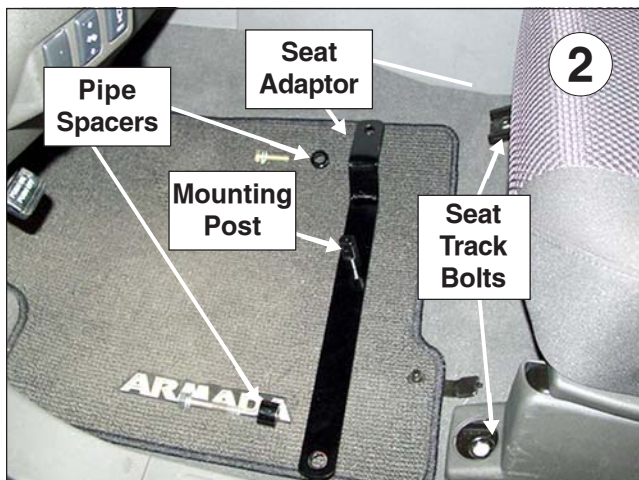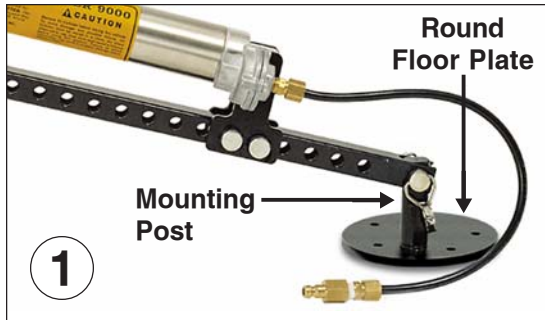

Parts List

- | | |
|-------------------------|---------------------------------------|
| (1) 3/8" lock washers | (1) 1" x 1/4" x .219 wall pipe spacer |
| (1) 3/8" x 3/4" bolt | (1) 10mm x 1.25 x 60 mm bolt |
| (2) 3/8" x 2 3/4" bolts | (1) 10mm x 1.25 x 40mm bolt |
| (2) 10mm lock washers | (1) 1" x 3/4" x .219 wall pipe spacer |

Instructions

- Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the seat adaptor. Bolt the mounting post to the seat adaptor with the included 3/8" x 3/4" bolt and 3/8" lock washer.
- Remove the plastic cover over the seat track bolt on the driver's side. Now, remove two 14mm (head) seat track mounting bolts, one on each side. Place the 1" x 3/4" x .219 wall pipe spacer over the driver's side mounting point and the 1" x 1/4" x .219 wall pipe spacer over the passenger's side mounting point. Set the seat adaptor over top of the pipe spacers. Bolt into place with a 10mm x 1.25 x 60mm bolt, lock washer and flat washer for the driver's side and a 10mm x 1.25 x 40mm bolt, lock washer and nut for the passengers side.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.