



SEAT ADAPTER KIT #88240 INSTALLATION INSTRUCTIONS



3391-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

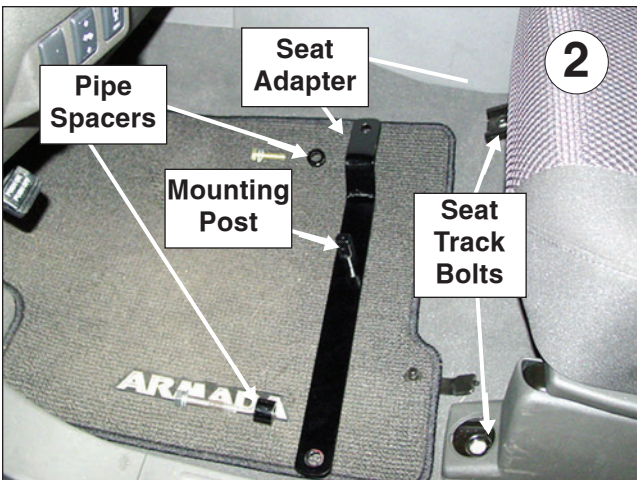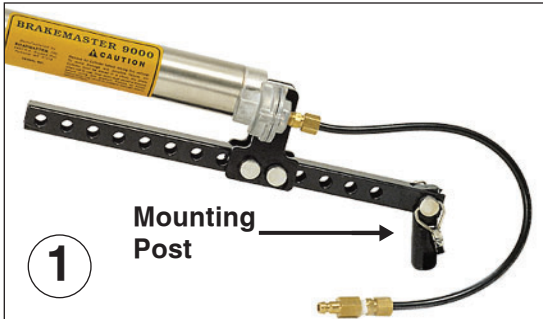

Parts List

- | | |
|-------------------------|---------------------------------------|
| (1) 3/8" lock washers | (1) 1" x 1/4" x .219 wall pipe spacer |
| (1) 3/8" x 3/4" bolt | (1) 10mm x 1.25 x 60mm bolt |
| (2) 3/8" x 2 3/4" bolts | (1) 10mm x 1.25 x 40mm bolt |
| (2) 10mm lock washers | (1) 1" x 3/4" x .219 wall pipe spacer |

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the plastic cover over the seat track bolt on the driver's side. Now, remove two 14mm (head) seat track mounting bolts, one on each side. Place the 1" x 3/4" x .219 wall pipe spacer over the driver's side mounting point and the 1" x 1/4" x .219 wall pipe spacer over the passenger's side mounting point. Set the seat adapter over top of the pipe spacers. Bolt into place with a 10mm x 1.25 x 60mm bolt, lock washer and flat washer for the driver's side and a 10mm x 1.25 x 40mm bolt, lock washer and nut for the passenger side.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.