





SEAT ADAPTER KIT #88246 INSTALLATION INSTRUCTIONS



3914-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

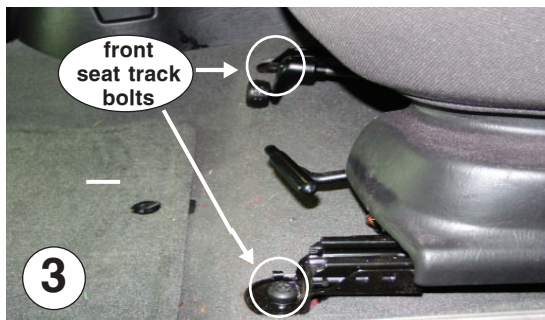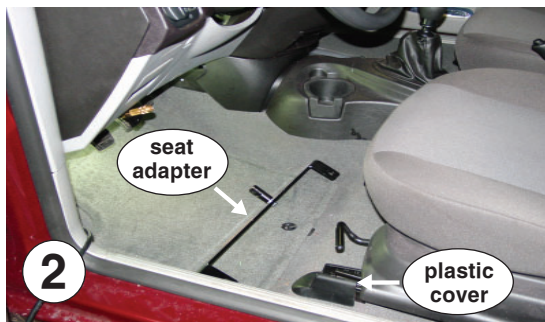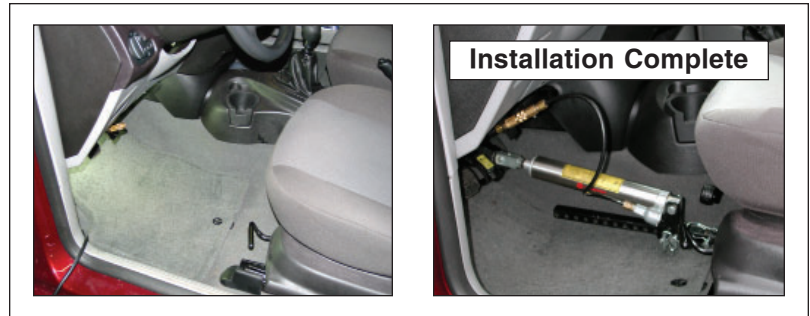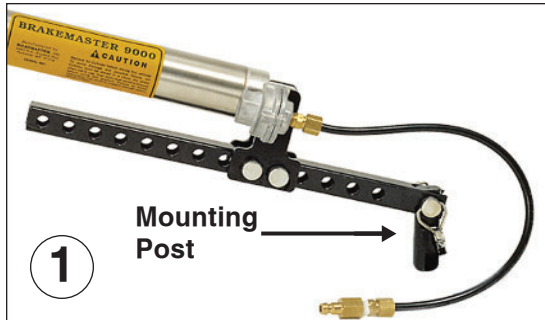

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the plastic seat track cover (Fig.2). Then, remove the two front T50 Torx seat track bolts (Fig.3). *Note:* due to manufacturing variances, there may be a 14mm (head) bolt and 14mm nut and weld stud that need to be removed instead. If this is the case, use a 5mm socket to remove the stud.

3. Place the seat adapter between the seat tracks and the floor of the vehicle (Fig.4). Make certain that the mounting post (Fig.1) is directly in line with the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Replace the bolts and the plastic cover that were removed in step 2. *Note:* if you had to remove the 14mm (head) bolt, 14mm nut and weld stud in step 2, use the two supplied 10mm x 1.5 x 30mm bolts, lock washers and flat washers to bolt through the seat adapter and into the floor.

Parts List

- | | |
|----------------------|-----------------------------|
| (1) 3/8" x 3/4" bolt | (2) 10mm x 1.5 x 30mm bolts |
| (1) 3/8" lock washer | (2) 10mm flat washers |
| | (2) 10mm lock washers |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.