



SEAT ADAPTOR KIT #88246 INSTALLATION INSTRUCTIONS



3914-02 01-11

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

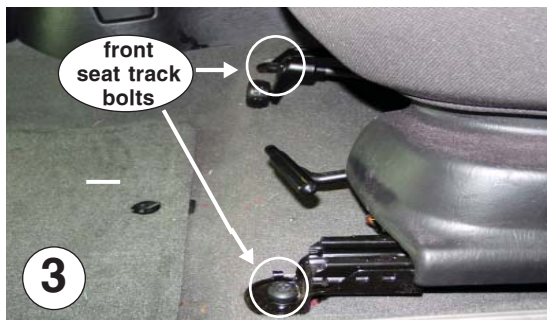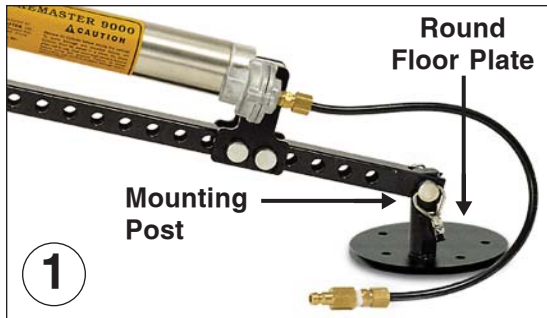

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a ½" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x ¾" bolt and 3/8" lock washer.

2. Remove the plastic seat track cover (Fig.2). Then, remove the two front T50 Torx seat track bolts (Fig.3). *Note:* due to manufacturing variances, there may be a 14mm (head) bolt and 14mm nut and weld stud that need to be removed instead. If this is the case, use a 5mm socket to remove the stud.

3. Place the seat adaptor between the seat tracks and the floor of the vehicle (Fig.4). Make certain that the mounting post (Fig.1) is directly in line with the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Replace the bolts and the plastic cover that were removed in step 2. *Note:* if you had to remove the 14mm (head) bolt, 14mm nut and weld stud in step 2, use the two supplied 10mm x 1.5 x 30mm bolts, lock washers and flat washers to bolt through the seat adaptor and into the floor.

Parts List

- | | |
|----------------------|-----------------------------|
| (1) 3/8" x ¾" bolt | (2) 10mm x 1.5 x 30mm bolts |
| (1) 3/8" lock washer | (2) 10mm flat washers |
| | (2) 10mm lock washers |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.