




SEAT ADAPTER KIT #88250 INSTALLATION INSTRUCTIONS



3858-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

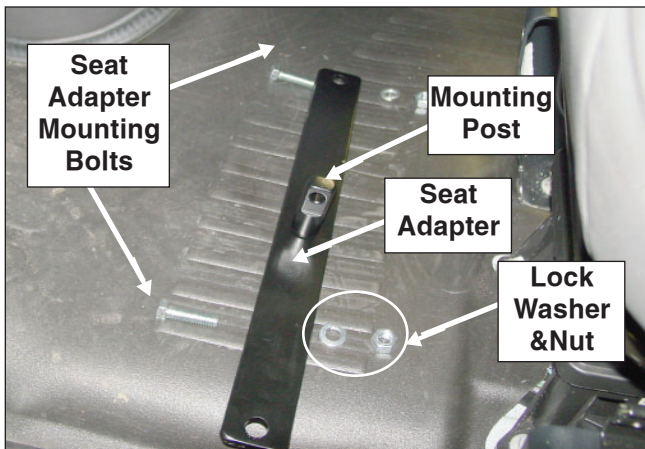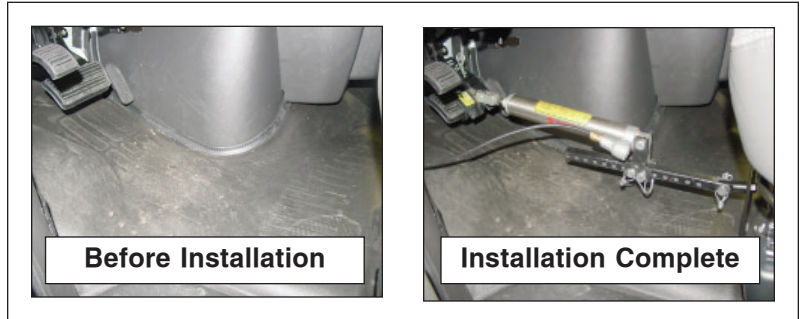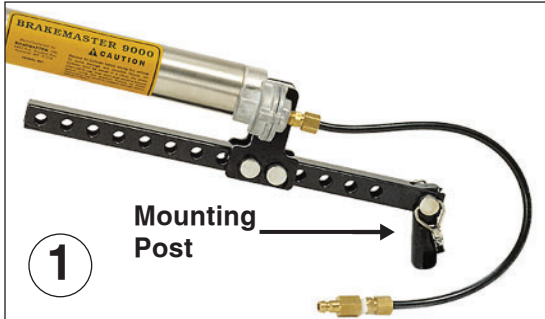

- ## Parts List
- (1) 3/8" lock washer
 - (1) 3/8" x 3/4" bolt
 - (2) 3/8" x 1 1/4" bolts
 - (2) 3/8" nut
 - (2) 3/8" lock washer

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

Continued on next page



1-800-669-9690



SEAT Adapter KIT #88250 INSTALLATION INSTRUCTIONS




3858-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6710 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

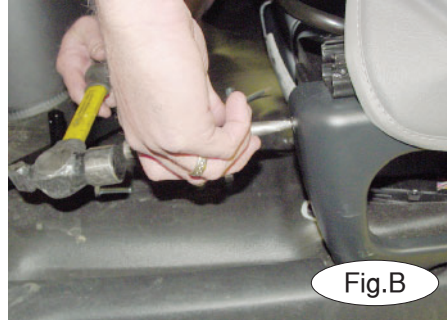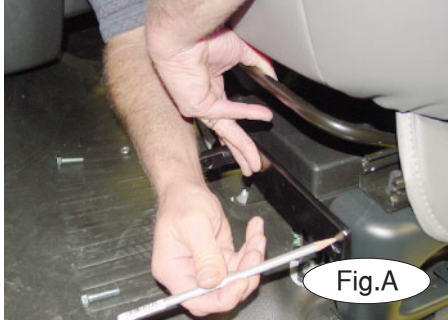

2. Hold the bracket in place over the end of the seat pedestal. Using the two existing holes in the adapter as a template mark each side for drilling (Fig.A). Center punch the areas you marked (Fig.B), then, drill the two holes using a 3/8" drill (Fig.C). Now, put the seat adapter over the holes you drilled and bolt into place using the supplied 3/8" x 1 1/4" bolts, lock washers and nuts (Fig.D).

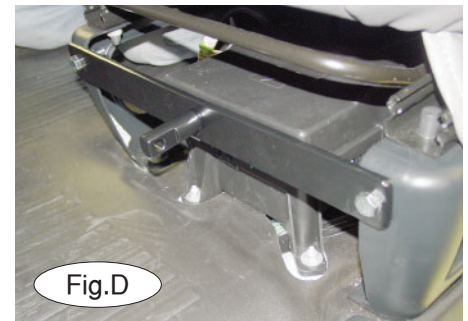

WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.