



1-800-669-9690




SEAT ADAPTOR KIT #88250 INSTALLATION INSTRUCTIONS



3858-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

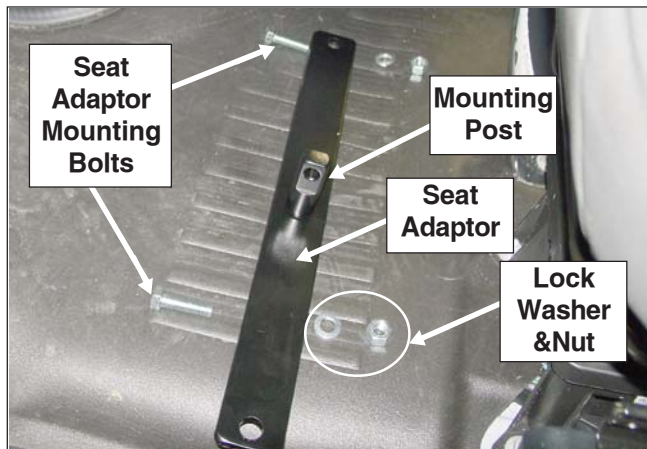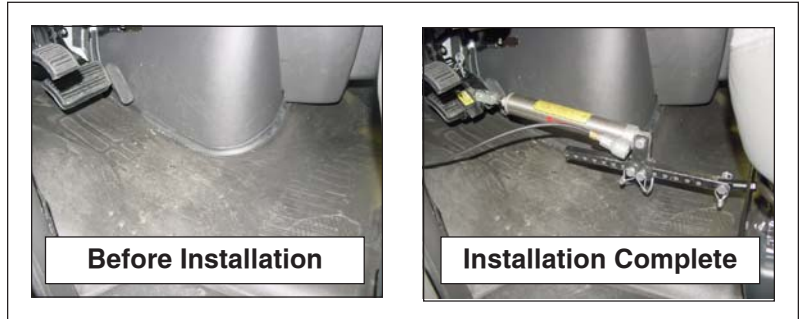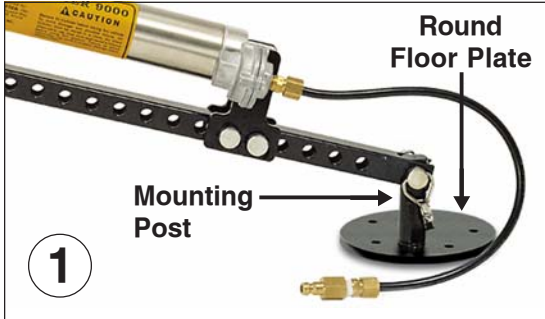

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 3/8" x 1 1/4" bolts
- (2) 3/8" nut
- (2) 3/8" lock washer

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your Brake Master system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

Continued on next page



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690


SEAT ADAPTOR KIT #88250 INSTALLATION INSTRUCTIONS




3858-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

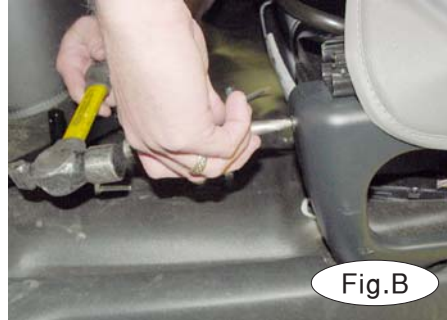

2. Hold the bracket in place over the end of the seat pedestal. Using the two existing holes in the adaptor as a template mark each side for drilling (Fig.A). Center punch the areas you marked (Fig.B), then, drill the two holes using a 3/8" drill (Fig.C). Now, put the seat adaptor over the holes you drilled and bolt into place using the supplied 3/8" x 1 1/4" bolts, lock washers and nuts (Fig.D).

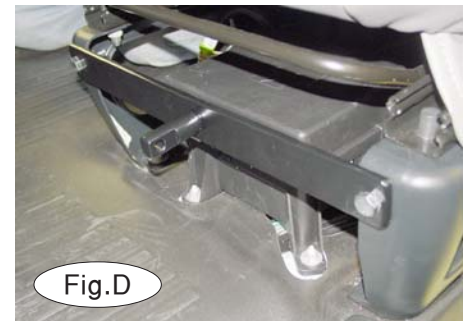

WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.