



# SEAT ADAPTER KIT #88251 INSTALLATION INSTRUCTIONS



3871-07

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

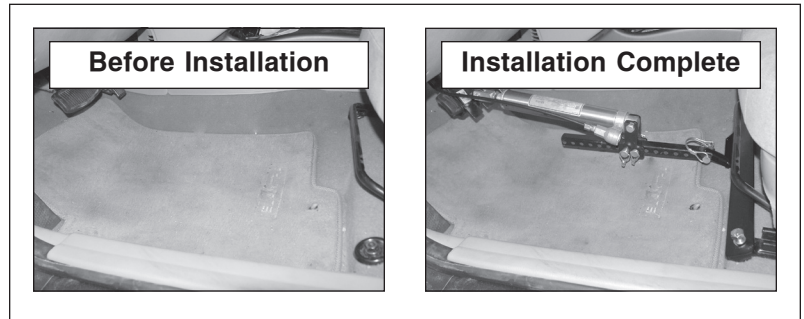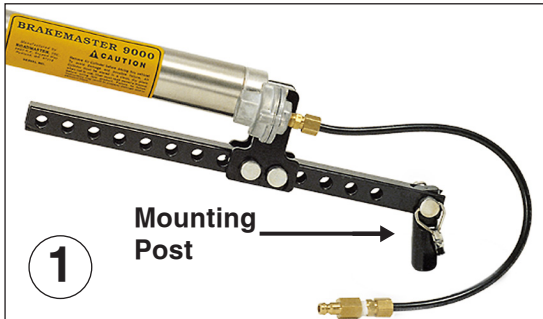

## Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit. *Note: due to manufacturing variances, you may need to use the secondary hole on the tab to ensure alignment with the brake pedal.*
- 2.** For '17 and later Kia Soul models: proceed to the next page. For all other models: remove the 14mm factory bolts from the seat tracks. *Note: due to manufacturing variances, the seat track bolts may have a Torx head. If this is the case, use a 3/4" socket to remove them.*
- 3.** Place the seat adapter over the seat tracks and bolt into place with the supplied 10mm x 1.25 x 35mm bolts, lock washers and flat washers. *Note: make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.*
- 4.** Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 10mm x 1.25 x 35mm bolts
- (2) 10mm flat washer
- (2) 10mm lock washer
- (2) 10mm x 1.25 x 60mm bolts
- (2) 1" x 1" x .188 wall pipe spacers


# SEAT ADAPTER KIT #88251 INSTALLATION INSTRUCTIONS



3871-07

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

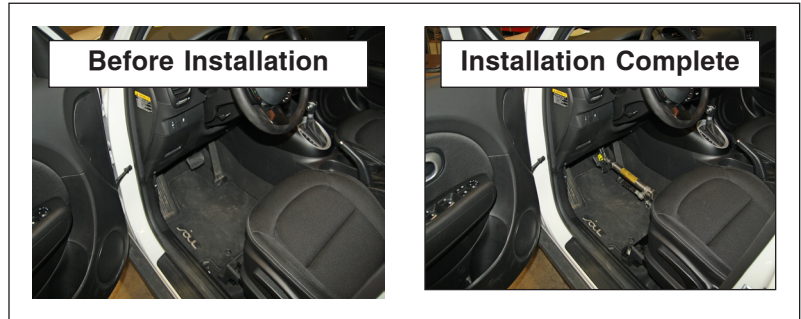

## For '17 and later Soul models only

1. Remove the 14mm factory bolts from the seat tracks. *Note: flip open the seat track covers, if the vehicle is so equipped.*
2. Place the two supplied 1" x 1" x .188 wall pipe spacers over the holes you exposed in the previous step. Place the seat adapter over the pipe spacers and bolt the seat adapter into place using the supplied 10mm x 1.25 x 60mm bolts, lock washers and flat washers. *Note: make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.*

3. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

### CAUTION

Once the seat adapter has been installed, carefully run the seat through its full range of motion. If it is impeded in any way, immediately stop and correct the interference. Failure to do so may result in non-warranty property damage.



### WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.