


SEAT ADAPTER KIT #88254 INSTALLATION INSTRUCTIONS




3880-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

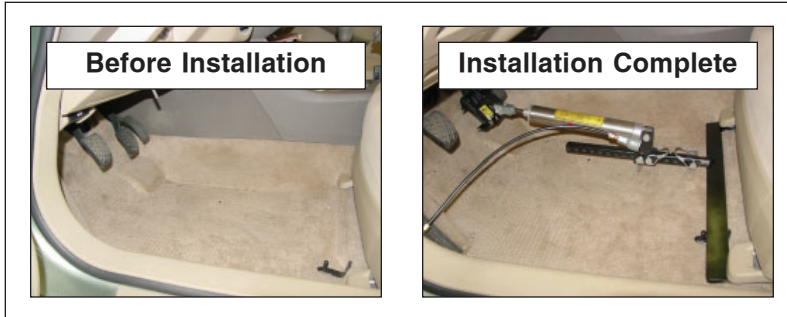

- ## Parts List
- (2) 10mm x 1.25 x 40mm
 - (2) 10mm lock washer
 - (2) 10mm fender washer

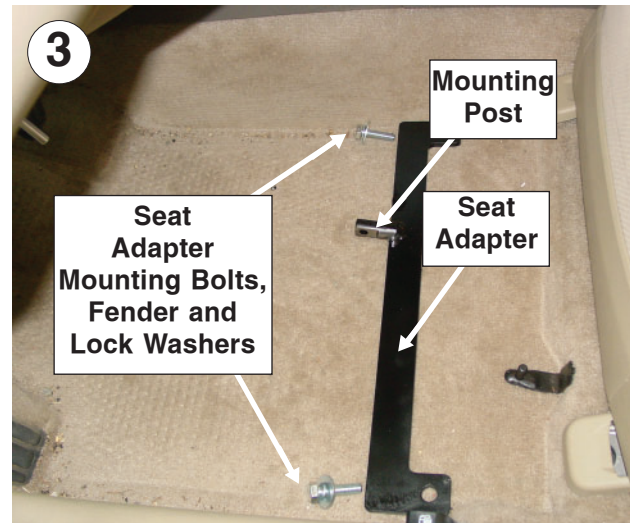

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Now, die grind a small section of the front half of the bolt opening to allow clearance vfor the bolt once the seat adapter is placed underneath the seat tracks.
3. Place the adapter between the floor and the seat tracks, bolt into place using the supplied 10mm x 1.25 x 40mm bolts, fender washers and lock washers.
4. Tighten the rear seat bolts and replace the covers for the front and rear seat tracks.