



1-800-669-9690


SEAT ADAPTER KIT #88255 INSTALLATION INSTRUCTIONS



3889-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

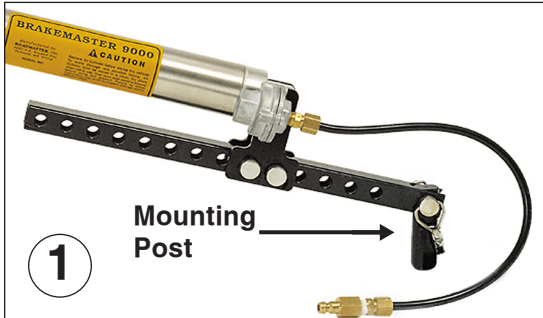

Before Installation



Installation Complete



Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.25 x 70mm bolt
- (2) 10mm lock washers
- (2) 10mm flat washer
- (2) 1" x 1 1/4" pipe spacer

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the two front circular plastic seat track covers. Then, remove the two front 14mm (head) seat track bolts. Now, place the 1" x 1 1/4" pipe spacers inside the plastic seat track openings, over the seat tracks.
- 3.** Next, place the seat adapter over the pipe spacers, bolt into place using the supplied 10mm x 1.25 x 70mm bolts, flat washers and lock washers.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.