




SEAT ADAPTOR KIT #88255 INSTALLATION INSTRUCTIONS



3889-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

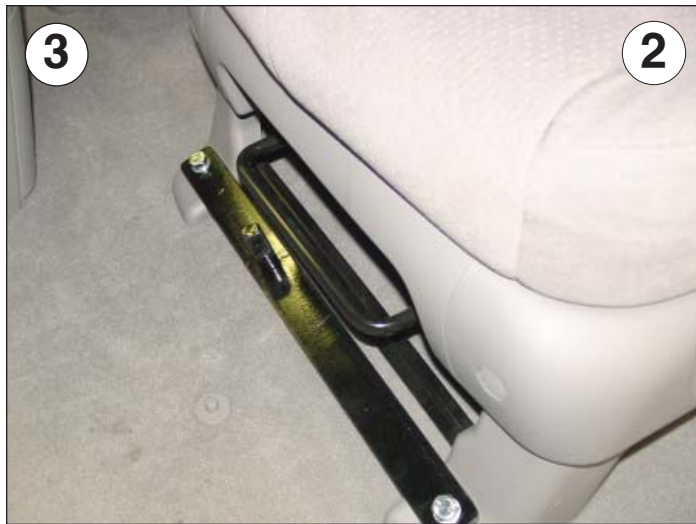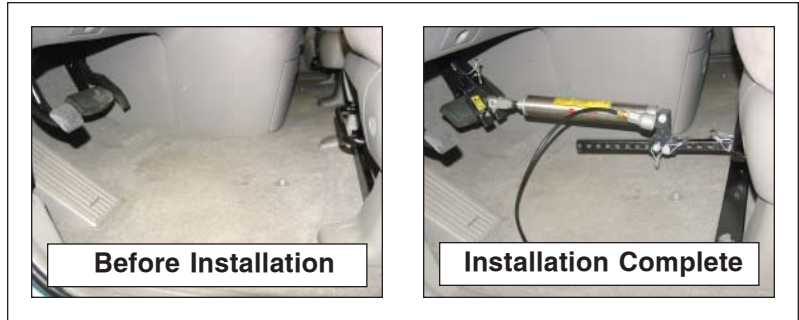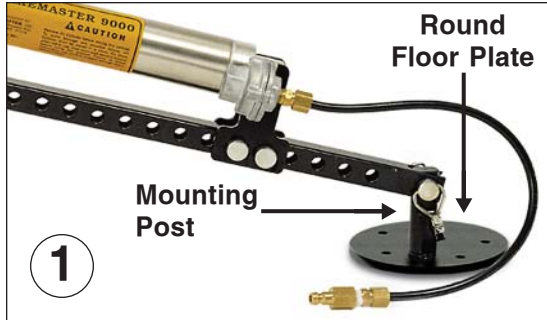

- ### Parts List
- (1) 3/8" x 3/4" bolt
 - (1) 3/8" lock washer
 - (2) 10mm x 1.25 x 70mm bolt
 - (2) 10mm lock washers
 - (2) 10mm flat washer
 - (2) 1" x 1 1/4" pipe spacer

Instructions

- 1.** Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). Secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.
- 2.** Remove the two front circular plastic seat track covers. Then, remove the two front 14mm (head) seat track bolts. Now, place the 1" x 1 1/4" pipe spacers inside the plastic seat track openings, over the seat tracks.
- 3.** Next, place the seat adaptor over the pipe spacers, bolt into place using the supplied 10mm x 1.25 x 70mm bolts, flat washers and lock washers.

 **WARNING** Failure to follow these instructions can result in property damage, personal injury or even death.