

SEAT ADAPTER KIT #88258 INSTALLATION INSTRUCTIONS




3967-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc.

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407

fax 360-735-9300

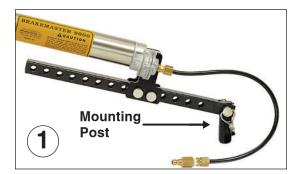











Instructions

- **1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2. Remove the two 15mm (head) seat track bolts (Fig.2).
- **3.** For 2010 Ford F-150 models: see steps 5 through 7. For all other models: Place 1" x ¾" pipe spacers over the seat track (Fig.3) and place the seat bracket over the pipe spacers. Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- 4. Bolt the seat bracket into place using the 12mm x 1.75 x 50mm bolts and 12mm lock washers (Fig.4).


Continued on next page

Parts List

- (1) 3/8" x 3/4" bolt
- (2) 12mm lock washers
- (1) 3/8" lock washer
- (2) 3/4" pipe spacers
- (2) 12mm x 1.75 x 50mm

bolts





SEAT ADAPTER KIT #88258 INSTALLATION INSTRUCTIONS



3967-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

- **5.** For 2010 Ford F-150 models: Loosen the rear seat track bolts.
- **6.** Place the seat adapter between the floor and the front seat tracks.
- 7. Replace the hardware from step 2, and retighten the rear seat track bolts.