


# SEAT ADAPTOR KIT #88264 INSTALLATION INSTRUCTIONS



Part# 85-4040-02 12-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

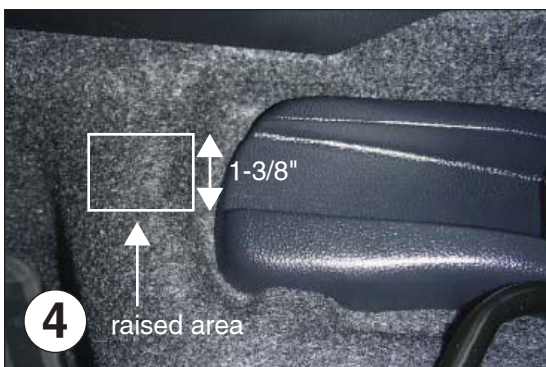

## Instructions

1. Take off the rear seat track covers (Fig.1) and loosen the two 14mm (head) rear seat track bolts (Fig.2).
2. Remove the two front seat track covers and remove the two 14mm (head) front seat track bolts (Fig.3). *Note:* the bolts will not be replaced.
3. If there is a raised area in the carpeting directly in front of the passenger side seat track, the carpet will require trimming to accommodate the seat adaptor. If this is the case, following the instructions below to trim the carpet. If not, move to step 4.

**To trim the carpet:** the area is 1-3/8" on center with the seat track bolt. Use the white lines in Figure 4 as a guide for trimming, and trim the carpet flush with the bottom of the seat track.

4. Place the passenger side of the seat adaptor under the seat track and place the driver's side over the top of the seat track. *Note:* the mounting post on the adaptor must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

*continued on next page*

### Parts List

- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (1) 1" x 1/2" pipe spacer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

## SEAT ADAPTOR KIT #88264 INSTALLATION INSTRUCTIONS



Part# 85-4040-02 12-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

*continued from preceding page*



Place the 1" x ½" pipe spacer between the seat adaptor and the seat track on the driver's side. Bolt the adaptor and seat track into place using the supplied 10mm x 1.25 x 40mm bolts, lock washers and flat washers (Fig.5).

Tighten the rear seat track bolts and replace the seat track covers.

**5.** Trim the driver's side seat track cover to fit over the seat adaptor and use the white line in Figure 5 as a guide for trimming. The passenger side seat track cover will snap back into place without trimming.

**6.** Attach the air cylinder to the adaptor.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.