




SEAT ADAPTER KIT #88266 INSTALLATION INSTRUCTIONS



4148-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

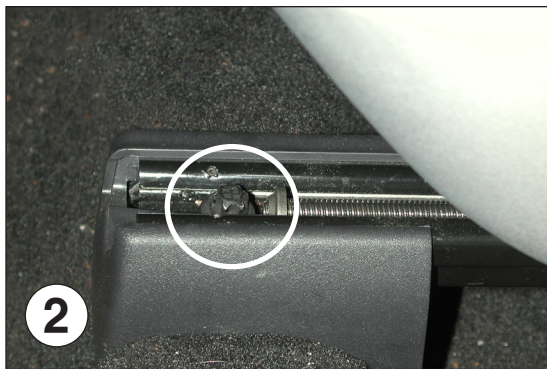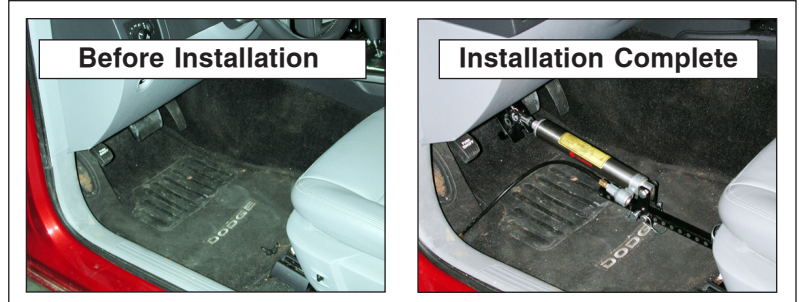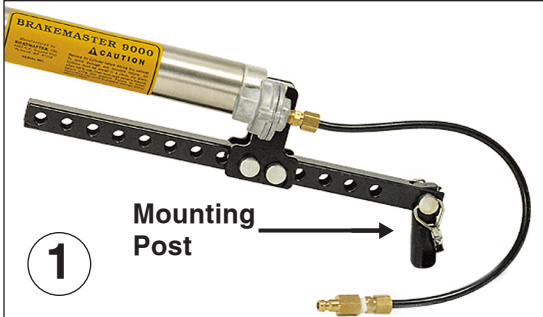


Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the two front seat track bolts using a 12 pt. 10mm socket (Fig.2). Loosen the two rear seat track bolts using the same socket (Fig.3).

3. Place the seat adapter between the floor and the front seat tracks and bolt it into place using the two supplied 10mm x 1.5 x 35mm Allen head bolts and 10mm lock washers (Fig.4). Tighten the rear seat track bolts. *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

4. Attach the air cylinder to the adapter.

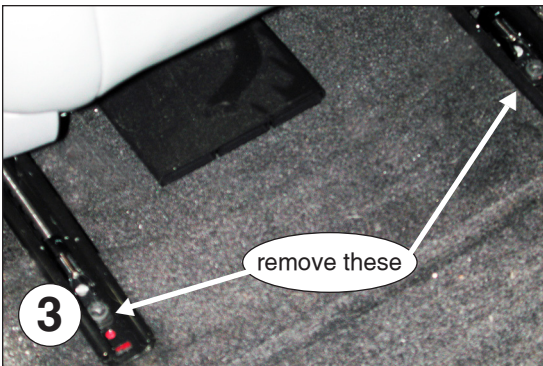

Parts List

- | | |
|-----------------------|--|
| (1) 3/8" x 3/4" bolt | (2) 10mm x 1.5 x 35mm Allen head bolts |
| (1) 3/8" lock washer | |
| (2) 10mm lock washers | |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.