
R 1-800-669-9690 SEAT ADAPTER KIT #88267 INSTALLATION INSTRUCTIONS

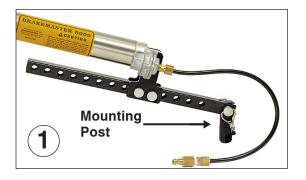

4154-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com











Instructions

1. Locate the mounting post (Fig.1) that came with vour BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the two front seat track covers. Remove the two 14mm (head) front seat track bolts. Now, remove the two rear seat track covers and loosen the two 14mm (head) rear seat track bolts (Fig.2).

3. Place the seat adapter over the seat track mount on the passenger side and under the driver's side mount (Fig.3). Place a 10mm lock washer and fender washer over the supplied 10mm x 1.25 x 35mm bolt, and bolt through the seat adapter and seat track on the driver's side (Fig.4).

continued on next page

Parts List

Driver's side:

- (1) 10mm x 1.25 x 35mm bolt (1) 10mm x 1.25 x 45mm bolt
- (1) 10mm fender washer
- (1) 10mm lock washer
- Passenger side:
- (1) 10mm fender washer
- (1) 10mm lock washer
- (1) 1" x 3/8" .219 wall pipe
- spacer







4154-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Vancouver, WA 98682 360-896-0407 ROADMASTER, Inc. 6110 NE 127th Ave. fax 360-735-9300 www.roadmasterinc.com



continued from preceding page

Instructions

4. Place a 10mm lock washer and fender washer over the supplied 10mm x 1.25 x 45mm bolt, and place a 1" x 3/8" pipe spacer between the seat adapter and the seat track on the passenger side. Bolt through the seat adapter, pipe spacer and seat track (Fig.5). Note: the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal (Fig.6). The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

5. Attach the air cylinder to the adapter.

