



SEAT ADAPTOR KIT #88267 INSTALLATION INSTRUCTIONS



Part# 85-4154-01 08-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

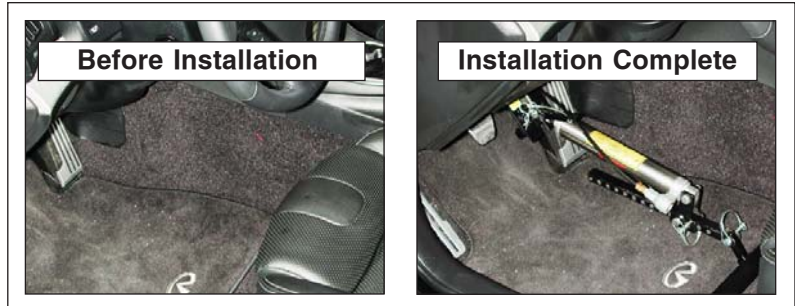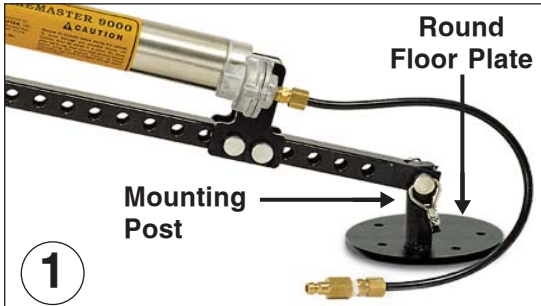

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Remove the two front seat track covers. Remove the two 14mm (head) front seat track bolts. Now, remove the two rear seat track covers and loosen the two 14mm (head) rear seat track bolts (Fig.2).

3. Place the seat adaptor over the seat track mount on the passenger side and under the driver's side mount (Fig.3). Place a 10mm lock washer and fender washer over the supplied 10mm x 1.25 x 35mm bolt, and bolt through the seat adaptor and seat track on the driver's side (Fig.4).

continued on next page

Parts List

| Driver's side: | Passenger side: |
|-----------------------------|-------------------------------------|
| (1) 10mm x 1.25 x 35mm bolt | (1) 10mm x 1.25 x 45mm bolt |
| (1) 10mm fender washer | (1) 10mm fender washer |
| (1) 10mm lock washer | (1) 10mm lock washer |
| | (1) 1" x 3/8" .219 wall pipe spacer |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

SEAT ADAPTOR KIT #88267 INSTALLATION INSTRUCTIONS



Part# 85-4154-01 08-08

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

continued from preceding page

Instructions

4. Place a 10mm lock washer and fender washer over the supplied 10mm x 1.25 x 45mm bolt, and place a 1" x 3/8" pipe spacer between the seat adaptor and the seat track on the passenger side. Bolt through the seat adaptor, pipe spacer and seat track (Fig.5). *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal (Fig.6). The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

5. Attach the air cylinder to the adaptor.

