



SEAT ADAPTER KIT #88270 INSTALLATION INSTRUCTIONS



4192-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

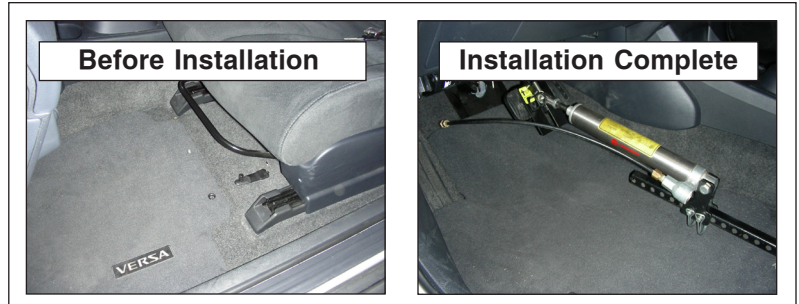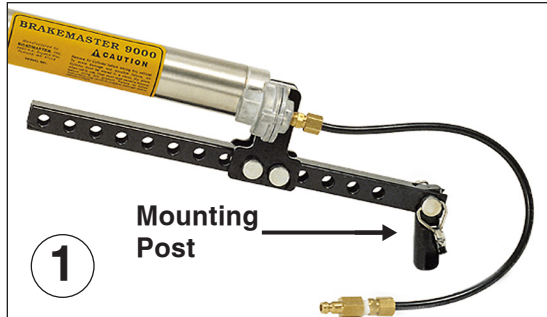

- ### Parts List
- (1) 3/8" x 3/4" bolt
 - (1) 3/8" lock washer
 - (2) 10mm x 1.25 x 40mm bolts
 - (2) 10mm lock washers
 - (2) 1" x 1/2" .188 wall pipe spacers

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Pull the floor mat up to remove it from the pull tab. Place the mat slightly forward on the floor of the vehicle (Fig.2). Now, remove the two plastic seat track covers and the two 16mm seat track bolts.
- 3. For 2012 models only:** push the seat forward, and loosen one 16mm (head) and one T47 Torx rear seat track bolts.
- 4.** On each side, place a 1" x 1/2" pipe spacer between the seat track and the seat adapter. On each side, bolt through the seat adapter, pipe spacer and the seat track using one of the supplied 10mm x 1.25 x 40mm bolts and a 10mm lock washer (Fig.3). *Note:* the floor mat can be reattached to the pull tab by cutting a small hole in the mat so the seat post can pass through it.
- 5.** Place the seat adapter between the seat tracks and the floor. *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. **For 2012 models only:** tighten the rear seat track bolts.
- 6.** Attach the air cylinder to the adapter.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.