


SEAT ADAPTOR KIT #88273 INSTALLATION INSTRUCTIONS



4260-00 01-09

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

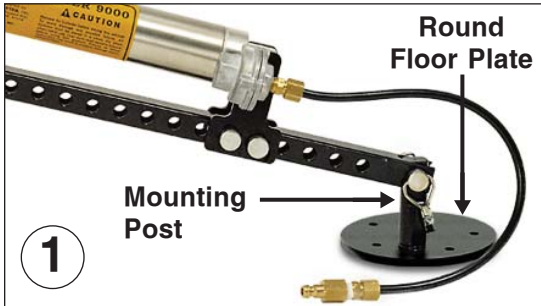

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.5 x 45mm bolts
- (2) 10mm lock washers
- (2) 1" x 1" .188 wall pipe spacers

Instructions

- 1.** Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer.
- 2.** Remove the two front T55 Torx seat pedestal bolts (Fig.2).
- 3.** Place a 1" x 1" x .188 wall pipe spacer over each hole you exposed in the previous step. Place the seat adaptor over the top of the pipe spacers with the post closest to the driver's side door (Fig.3). *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- 4.** For each hole, bolt through the seat adaptor, pipe spacer and into the floor using the supplied 10mm x 1.5 x 45mm bolts and lock washers.
- 5.** Attach the air cylinder to the adaptor.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.