


SEAT ADAPTER KIT #88273 INSTALLATION INSTRUCTIONS



4260-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

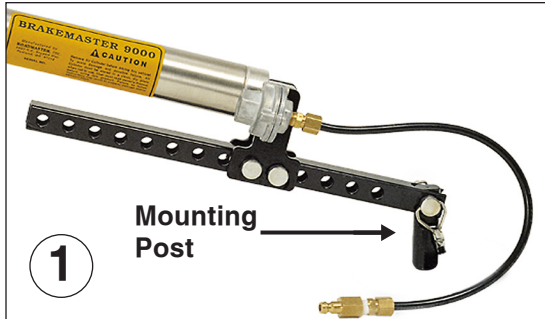

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove the two front T55 Torx seat pedestal bolts (Fig.2).
3. Place a 1" x 1" x .188 wall pipe spacer over each hole you exposed in the previous step. Place the seat adapter over the top of the pipe spacers with the post closest to the driver's side door (Fig.3). *Note:* the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. For each hole, bolt through the seat adapter, pipe spacer and into the floor using the supplied 10mm x 1.5 x 45mm bolts and lock washers.
5. Attach the air cylinder to the adapter.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.5 x 45mm bolts
- (2) 10mm lock washers
- (2) 1" x 1" .188 wall pipe spacers



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.