
R 1-800-669-9690 SEAT ADAPTER KIT #88275 INSTALLATION INSTRUCTIONS

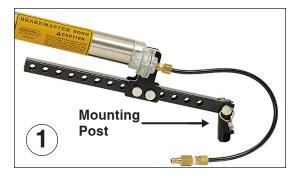

4278-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com











Instructions

1. Locate the mounting post (Fig.1) that came with vour BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.


2. Remove the two front plastic seat track covers. Remove the two front 14mm seat track nuts (Fig.2).

3. Slide the seat forward as far as it will go, and remove the rear seat track covers. Remove the two rear seat track nuts (Fig.3).

4. Lift the front seat tracks off the stude and place the seat adapter over the exposed studs. Note: the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Now, replace the front and rear nuts and torque to the manufacturer's recommended specifications. Replace the front and rear seat track covers (Fig.4).

5. Attach the air cylinder.





Failure to follow these instructions can result in property damage, personal injury or even death.