



1-800-669-9690





SEAT ADAPTOR KIT #88276 INSTALLATION INSTRUCTIONS



Part# 4330

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

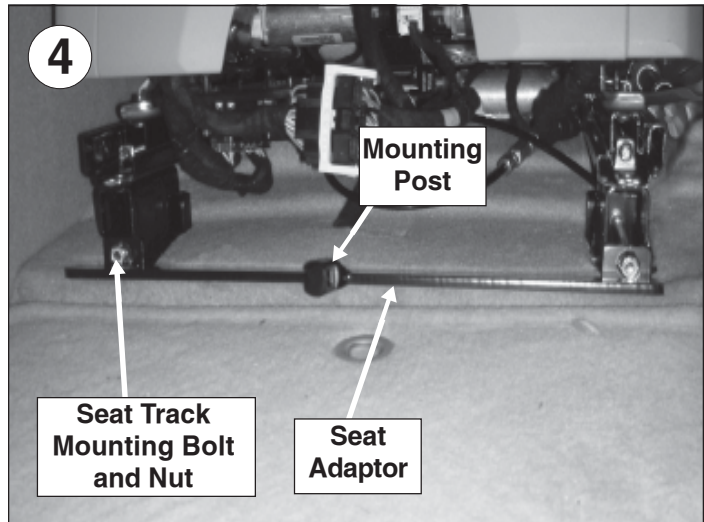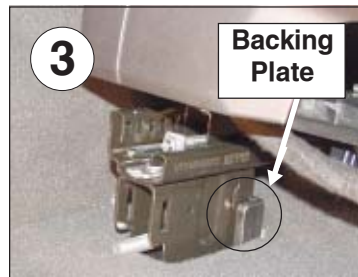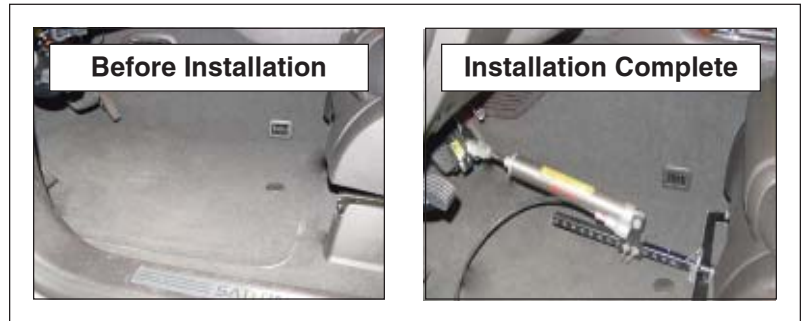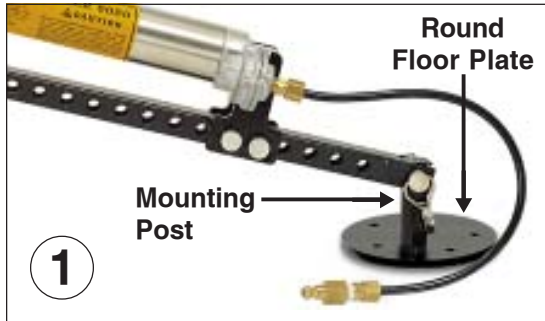

- ## Parts List
- (2) 3/8" x 4 1/2" bolt
 - (2) 3/8" nyloc nut

Instructions

- 1.** Unsnap the seat track cover from the left side of the driver's seat by pulling out on it.
- 2.** Now, hook the backing plates over the rear of the seat pedestal (with the hook facing toward the inside of the seat), refer to picture 3 and 4 for correct placement. Next, place the 3/8" x 4 1/2" bolt through the backing plate and the seat pedestal.
- 3.** Place the seat adaptor over the bolts and finish with the supplied 3/8" nyloc nuts.

WARNING Failure to follow these instructions can result in property damage, personal injury or even death.