





SEAT ADAPTER KIT #88276 INSTALLATION INSTRUCTIONS



4330-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

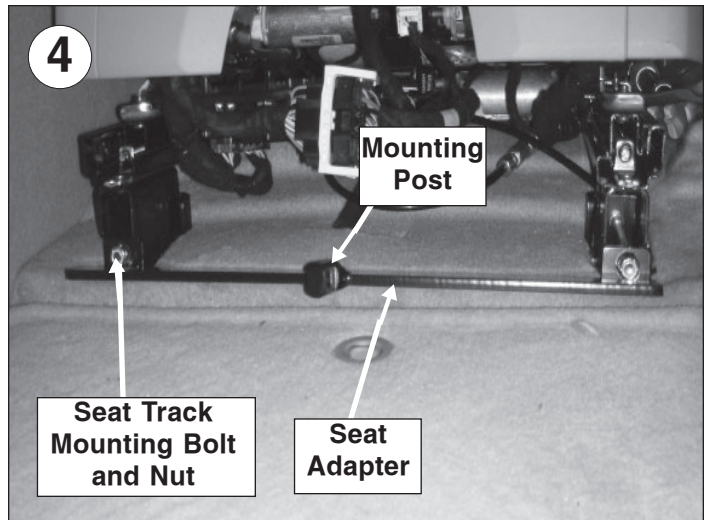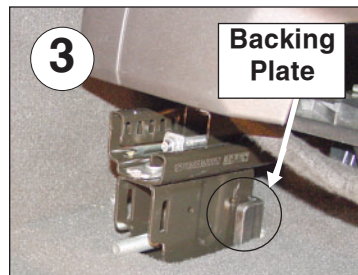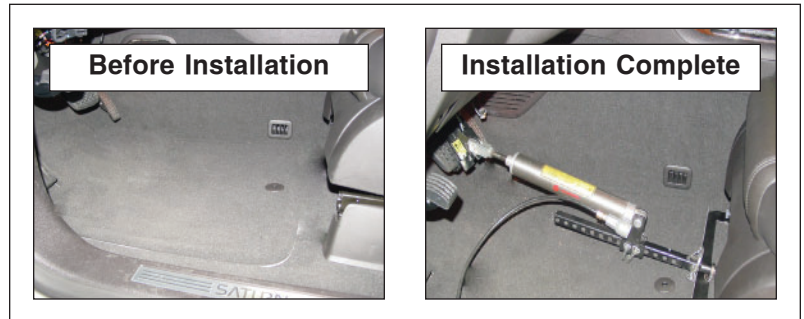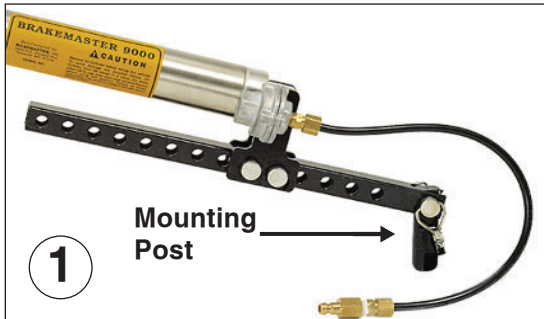

- ## Parts List
- (2) 3/8" x 4½" bolt
 - (2) 3/8" nylock nut
 - (2) Backing plates

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Now, hook the backing plates over the rear of the seat pedestal (with the hook facing toward the inside of the seat), refer to picture 3 and 4 for correct placement. Next, place the 3/8" x 4½" bolt through the backing plate and the seat pedestal.
- 3.** Place the seat adapter over the bolts and finish with the supplied 3/8" nylock nuts.