

1-800-669-9690





SEAT ADAPTOR KIT #88276 INSTALLATION INSTRUCTIONS



Part# 4330

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

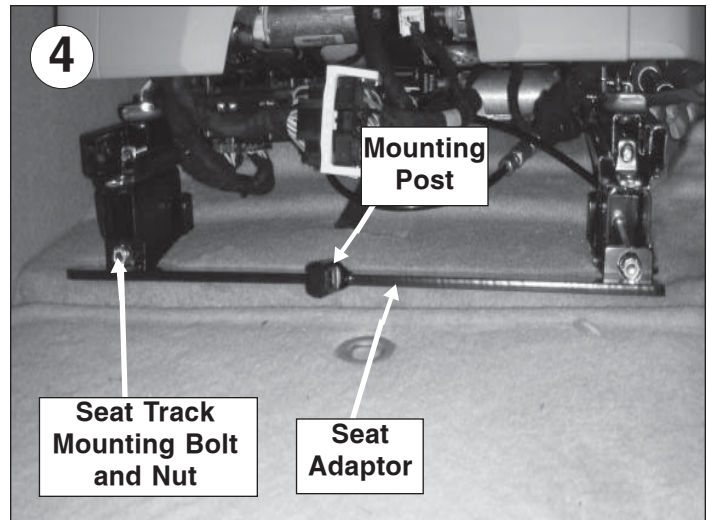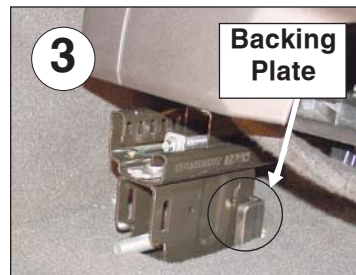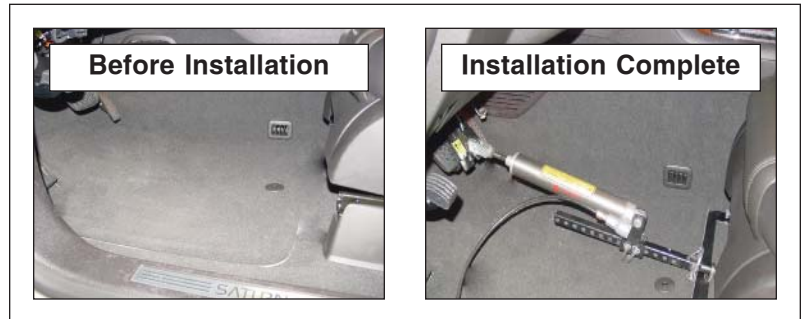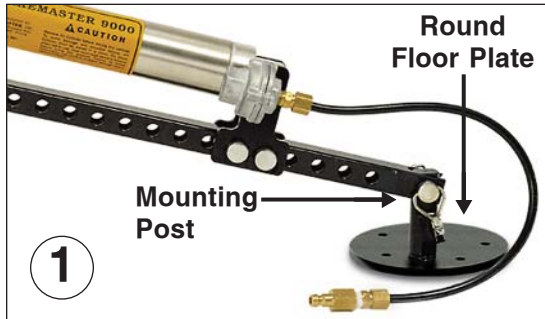

Parts List

- (2) 3/8" x 4 1/2" bolt
- (2) 3/8" nyloc nut

Instructions

1. Unsnap the seat track cover from the left side of the driver's seat by pulling out on it.
2. Now, hook the backing plates over the rear of the seat pedestal (with the hook facing toward the inside of the seat), refer to picture 3 and 4 for correct placement. Next, place the 3/8" x 4 1/2" bolt through the backing plate and the seat pedestal.
3. Place the seat adaptor over the bolts and finish with the supplied 3/8" nyloc nuts.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.