
R 1-800-669-9690 SEAT ADAPTER KIT #88277 INSTALLATION INSTRUCTIONS



4336-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

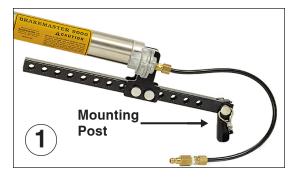





Parts List

- (1) 3/8" lock washer
- (1) Allen head bolt
- (2) 8mm x 1.25 x 35mm bolts
- (2) 8mm lock washers
- (2) 8mm fender washers



Instructions

1. Locate the mounting post (Fig.1) that came with vour BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Remove the two front 8mm (head) seat track bolts.

3. Slide the seat forward as far as it will go, and loosen the rear seat track bolts (Fig.2).

4. Place the seat adapter between the floor and the front seat tracks (Fig.3). Note: the mounting post on the adapter (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Now, on each side, bolt through the seat adapter and into the floor using the included 8mm x 1.25 x 35mm bolts, 8mm lock washers and 8mm fender washers. Tighten the rear seat track bolts.

5. Attach the air cylinder.

