


SEAT ADAPTOR KIT #88278 INSTALLATION INSTRUCTIONS



4345-01 03-11

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

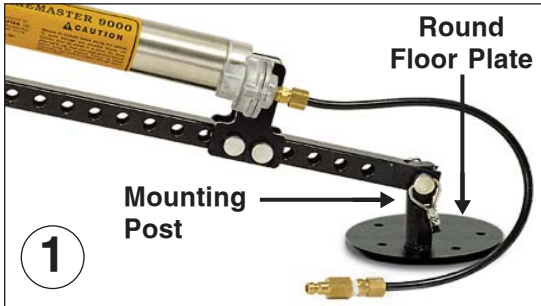

Instructions

1. Before installing the seat adaptor, the mounting post (which was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor using the supplied 3/8" lock washer and the supplied 3/8" x 3/4" bolt.
2. On each side, pull back the carpet flap (Fig.2) and remove a T45 Torx bolt attaching the front seat pedestal to the floor (Fig.3).
3. Place the 1" x 3/4" pipe spacers over the holes you just uncovered (Fig.3).
4. Place the seat adaptor over the pipe spacers (Fig.4). *Note:* the mounting post on the adaptor (Fig.1) must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
Now, bolt the seat adaptor into place using two 10mm x 1.50 x 50mm bolts, lock washers and flat washers.
5. Attach the air cylinder.

Parts List

- | | |
|------------------------------|--------------------------------------|
| (1) 3/8" lock washer | (2) 10mm flat washers |
| (2) 10mm lock washers | (2) 1" x 3/4" .219 wall pipe spacers |
| (2) 10mm x 1.50 x 50mm bolts | (1) 3/8" x 3/4" bolt |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.