


# SEAT Adapter KIT #88281 INSTALLATION INSTRUCTIONS



4411-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

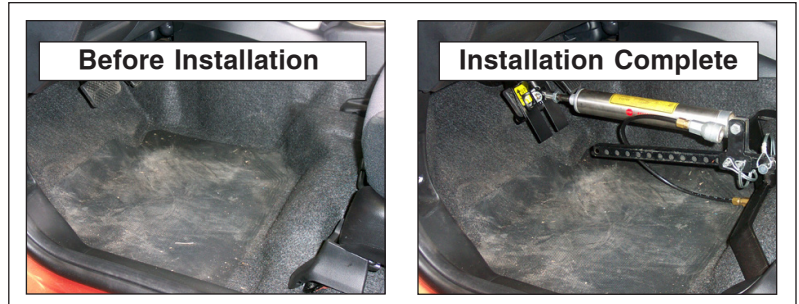

## Instructions

**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit. Then, remove the two front seat track covers and remove the two 14mm (head) front seat track bolts (Fig.1). *Note:* the factory bolts and passenger side seat track cover will not be replaced.

**2.** On the driver's side, install the 1" x 3/8" pipe spacer (Fig.2). On the passenger side, install the 1" x 5/8" pipe spacer (Fig.3).

**3.** Place the seat adapter over the pipe spacers. *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

**4.** Use the 10mm x 1.25 x 40mm bolt, lock washer and flat washer to secure the driver's side (Fig.4).

*continued on next page*

## Parts List

Driver's side	Passenger side
(1) 1" x 3/8" pipe spacer	(1) 1" x 5/8" pipe spacer
(1) 10mm x 1.25 x 40mm bolt	(1) 10mm x 1.25 x 45mm bolt
(1) 10 mm lock washer	(1) 10 mm lock washer
(1) 10mm flat washer	(1) 10mm flat washer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

## SEAT ADAPTER KIT #88281 INSTALLATION INSTRUCTIONS



4411-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com



5

*continued from preceding page*

**5.** Use the 10mm x 1.25 x 45mm bolt, lock washer and flat washer to secure the passenger side (Fig.5). Figure 6 shows the completed installation.

**6.** Now, trim the driver's side seat track cover to fit over the adapter.

**7.** Attach the air cylinder to the adapter.



6



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.