



# SEAT ADAPTER KIT #88284 INSTALLATION INSTRUCTIONS



4489-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

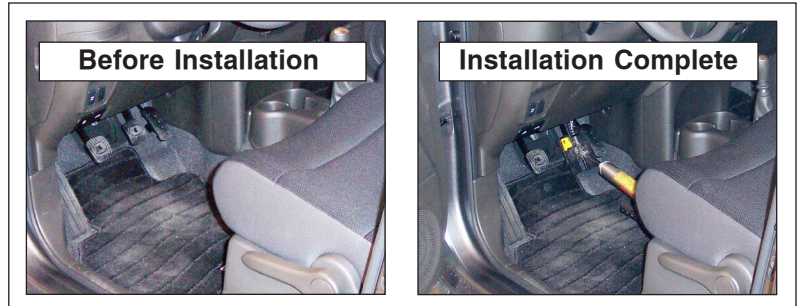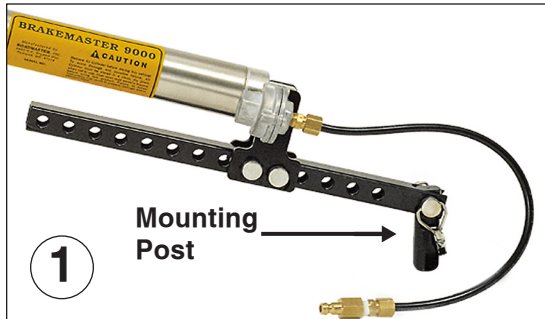

## Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit..
2. Remove two 14mm (head) seat track bolts (Fig.2).
3. Place the two 1" x 3/8" .188 wall pipe spacers over the top of the seat tracks. Place the seat adapter over the pipe spacers. *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. Using the supplied 10mm x 1.25 x 45mm bolts and 10mm lock washers, bolt through the seat adapter, the pipe spacer and into the weld nut in the floor (Fig.3).
5. Attach the air cylinder arm to the seat adapter.

### Parts List

- (2) 10mm x 1.25 x 45mm bolts
- (2) 10mm lock washers
- (2) 1" x 3/8" .188 wall pipe spacers
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.