



SEAT ADAPTER KIT #88285 INSTALLATION INSTRUCTIONS



4502-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

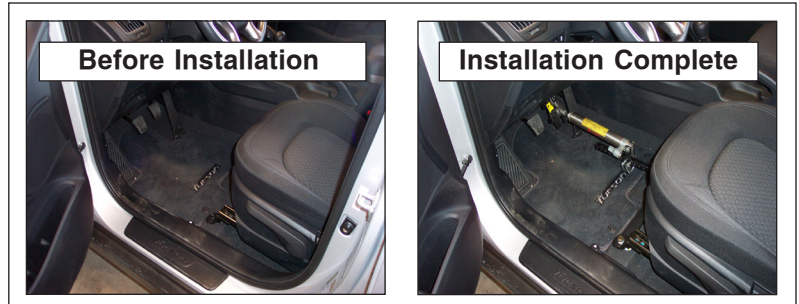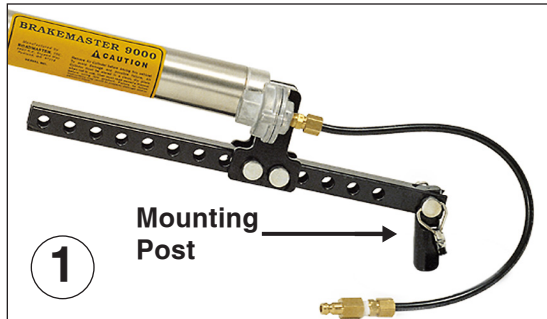

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove two 14mm (head) front seat track bolts (Fig.1).
3. Release the plastic covers on the rear seat track bolts, and loosen these bolts (Fig.2).
4. Place the seat adapter under the front seat track bolts and bolt into the floor using the two supplied 10mm x 1.25 x 40mm bolts, 10mm lock washer and 10mm flat washers (Fig.3). *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
5. Attach the air cylinder arm to the seat adapter.

Parts List

- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (1) Allen head bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.