



# SEAT ADAPTER KIT #88286 INSTALLATION INSTRUCTIONS



4518-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

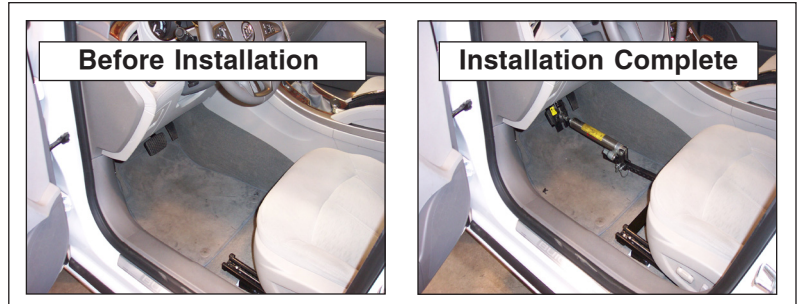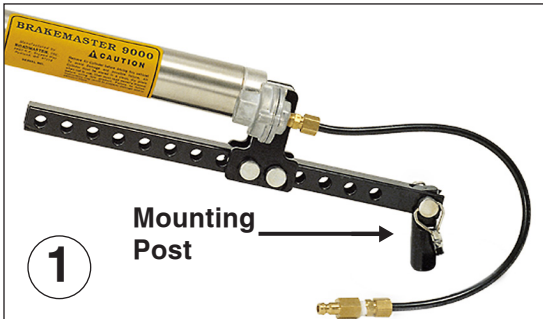

## Instructions

### Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 5/16" x 1" socket head bolts
- (2) 5/16" lock washers
- (2) 1/4" flat washers

**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

**2.** Push the driver's seat back as far as it will go. Place the seat adapter under the ends of the seat tracks. *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

**3.** Using the two supplied 1/4" flat washers, 5/16" lock washers and 5/16" x 1" socket head bolts, bolt through the seat adapter, seat track and into the weld nut on each side (Fig.2).

**4.** Attach the air cylinder arm to the seat adapter.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.