




SEAT ADAPTER KIT #88287 INSTALLATION INSTRUCTIONS



4554-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

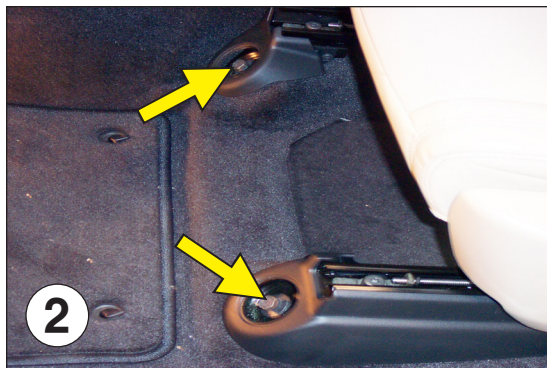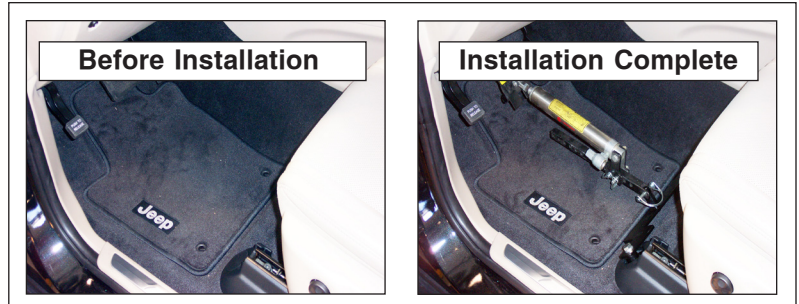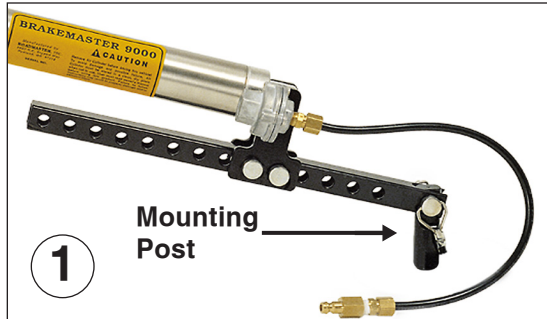

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove the two plastic seat track covers. Then, remove the two 15mm (head) seat track bolts (Fig.2 – arrows).
3. Over each hole you just exposed, place a 1" x 1" x .188 wall pipe spacer (Fig.3). Place the seat adapter over the pipe spacers. *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
4. Using the two supplied 10mm x 1.5 x 65mm bolts, 10mm flat washers and lock washers, bolt through the seat adapter, pipe spacer, seat track and into the weld nut on each side (Fig.4). Now, attach the air cylinder arm to the seat adapter using the supplied 3/8" lock washer and the bolt.

Parts List

- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer
- (2) 10mm x 1.5 x 65mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (2) 1" x 1" x .188 wall pipe spacers



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.