



SEAT ADAPTER KIT #88288 INSTALLATION INSTRUCTIONS



4569-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

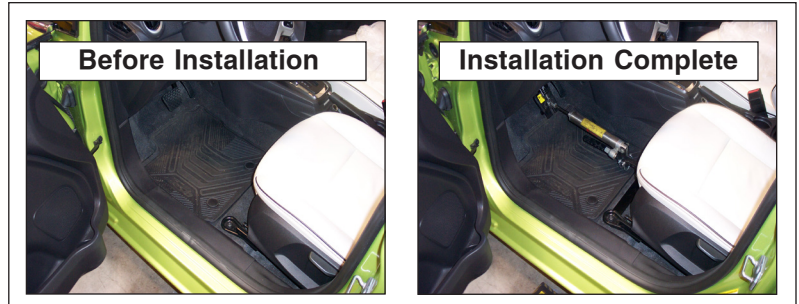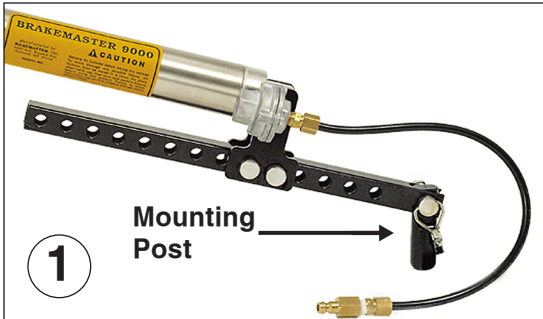

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Remove the front two T50 Torx seat track bolts (Fig.2).
- 3.** Place the seat adapter under the seat tracks and replace the bolts (Fig.3). *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
- 4.** Now, attach the air cylinder arm to the seat adapter.

Parts List

- (1) 3/8" lock washer
- (1) Allen head bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.