



SEAT ADAPTER KIT #88289 INSTALLATION INSTRUCTIONS



4623-04

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

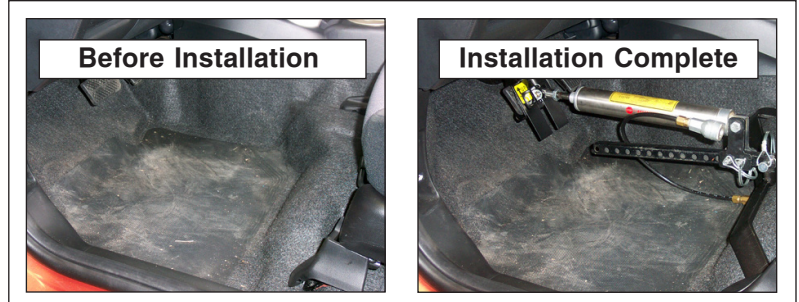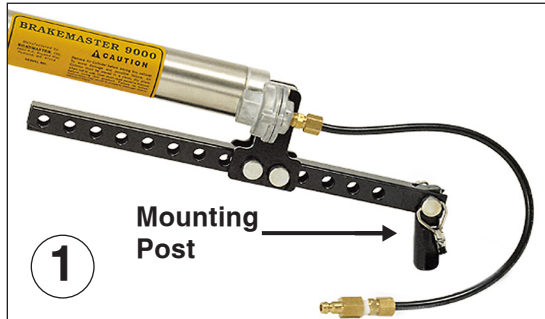

Instructions

- 1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
- 2.** Take off the rear seat track covers (Fig.2) and loosen the two 14mm (head) rear seat track bolts (Fig.3).
- 3.** Remove the two front seat track covers and remove the two 14mm (head) front seat track bolts (Fig.4). *Note:* the bolts will not be replaced.

continued from next page

Parts List

- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers
- (2) 10mm flat washers
- (1) 1" x 1/2" pipe spacer
- (1) 3/8" lock washer
- (1) 3/8" bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

SEAT ADAPTER KIT #88289 INSTALLATION INSTRUCTIONS




4623-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

continued from preceding page

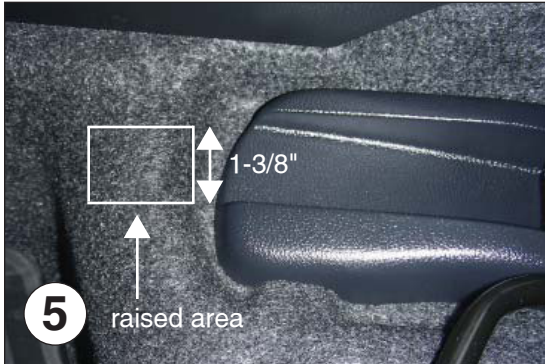

4. If there is a raised area in the carpeting directly in front of the passenger side seat track, the carpet will require trimming to accommodate the seat adapter. If this is the case, following the instructions below to trim the carpet. If not, move to step 5.

To trim the carpet: the area is 1-3/8" on center with the seat track bolt. Use the white lines in Figure 5 as a guide for trimming, and trim the carpet flush with the bottom of the seat track.



5. Place the passenger side of the seat adapter under the seat track and place the driver's side over the top of the seat track. *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Place the 1" x 1/2" pipe spacer between the seat adapter and the seat track on the driver's side. Bolt the adapter and seat track into place using the supplied 10mm x 1.25 x 40mm bolts, lock washers and flat washers.

Tighten the rear seat track bolts and replace the seat track covers.

6. Trim the driver's side seat track cover to fit over the seat adapter and use the white line in Figure 6 as a guide for trimming. The passenger side seat track cover will snap back into place without trimming.

7. Attach the air cylinder to the adapter.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.