




SEAT ADAPTER KIT #88293 INSTALLATION INSTRUCTIONS



4705-03

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

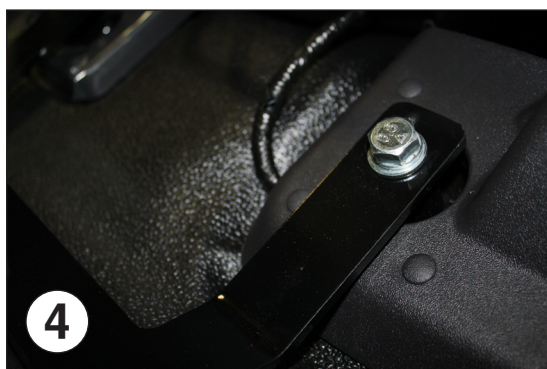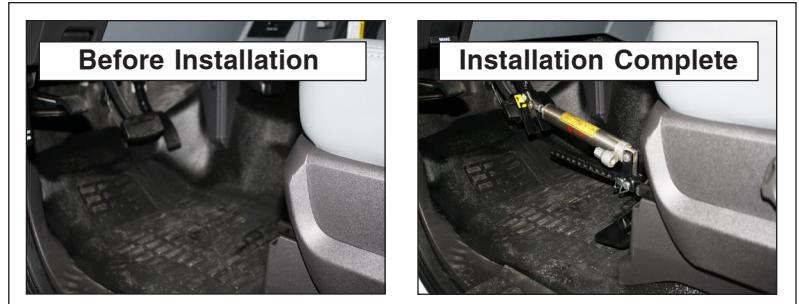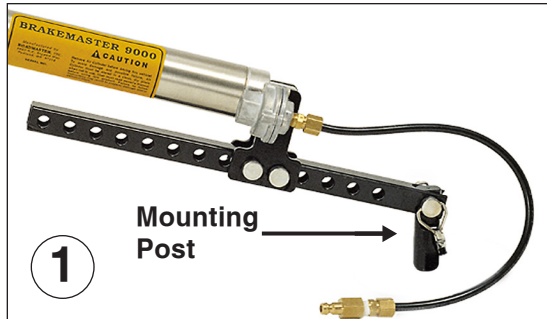

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Push the seat back as far as it will go. Now, remove the two plastic seat track covers (Fig.2).
3. Remove two 12mm (head) seat track bolts (Fig.3).
4. Place the two supplied 12mm lock washers and flat washers over the two 12mm x 1.75 x 60mm bolts and then, on each side, bolt through the seat adapter, a 1" x 1 1/4" x .188 wall pipe spacer and into the floor (Fig.4). *Note:* the mounting post on the adapter must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
5. Attach the air cylinder to the adapter.

Parts List

- (2) 12mm x 1.75 x 60mm bolts
- (2) 12mm lock washers
- (2) 12mm flat washers
- (2) 1" x 1 1/4" x .188 wall pipe spacers
- (1) 3/8" bolt
- (1) 3/8" lock washer



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.