



# SEAT ADAPTER KIT #88299 INSTALLATION INSTRUCTIONS



4782-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

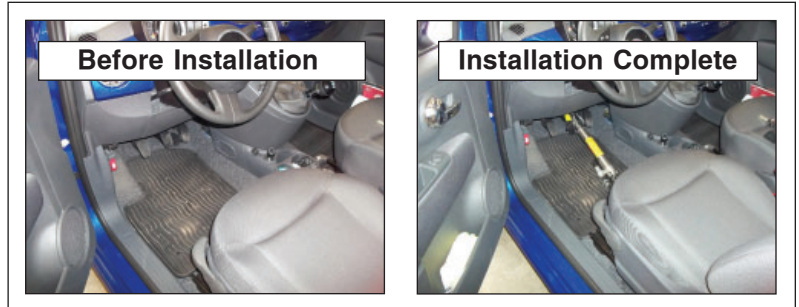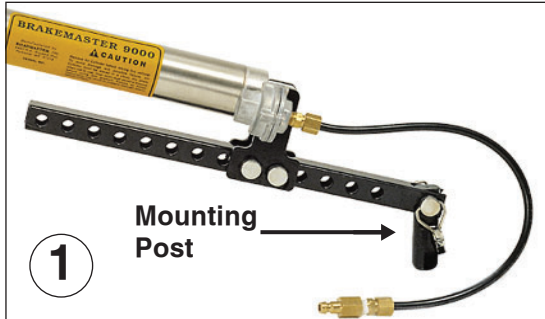

## Instructions



**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

**2.** Remove the two 15mm (head) front seat track bolts (Fig.2).

**3.** Place the two supplied 1" x 1/4" x .188 wall pipe spacers over the holes you just exposed. Now, place the seat adapter over the front seat tracks and bolt into the weld nuts using the two 15mm bolts you removed in the previous step (Fig.3). *Note:* position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

**4.** Attach the air cylinder to the adapter.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 1" x 1/4" x .188 wall pipe spacers



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.