R 1-800-669-9690 SEAT ADAPTER KIT #88300 INSTALLATION INSTRUCTIONS





4809-02

ROADMASTER, Inc.

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

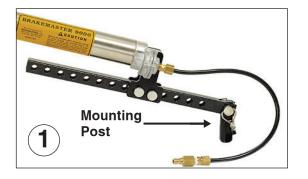

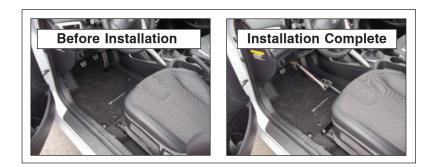

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Push the seat as far forward as possible and loosen the two rear 10mm seat track bolts with a 3/8" socket (Fig.2).

3. Push the seat back, and remove the two front 10mm bolts with a 3/8" socket (Fig.3).

4. Place the seat adapter over the seat track and bolt it into place using the supplied 10mm x 1.25 x 40mm bolts, washers and lock washers (Fig.4). Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Tighten the rear seat track bolts.



5. Attach the air cylinder to the adapter.

Parts List

- (1) 3/8" lock washer (2) 10mm washers
- (1) 3/8" x ³/₄" bolt (2) 10mm lock washers
- (2) 10mm x 1.25 x 40mm bolts





