



SEAT ADAPTOR KIT #88301 INSTALLATION INSTRUCTIONS



4836-00 12-11

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 1-800-669-9690 fax 360-735-9300 www.roadmasterinc.com

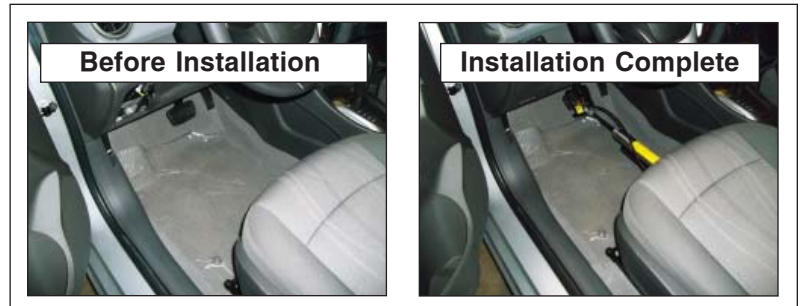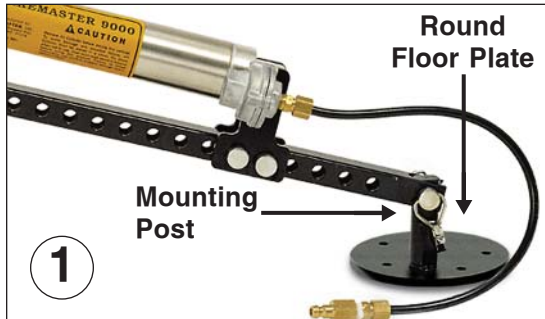

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 8mm x 1.25 x 20mm bolts
- (2) 8mm x 1.25 nuts
- (2) 8mm washers
- (2) 8mm lock washers

Instructions

1. Before installing the seat adaptor, the mounting post (that was included with your BrakeMaster system) must be removed from the round plate (Fig.1). First, secure the round plate in a vise. Use a wrench to loosen the mounting post, while holding the bolt with an Allen wrench. Don't try to turn the Allen bolt with the Allen wrench, as you might damage the wrench or bolt. Use a 1/2" open-end wrench to twist the mounting post off. Then, secure the mounting post to the center of the seat adaptor, using the included 3/8" x 3/4" bolt and 3/8" lock washer.

2. Slide the seat all the way back. Place the seat adaptor under the forwardmost pre-existing holes in the seat track. Note: position the adaptor so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Now, bolt down through the seat track and seat adaptor using the supplied 8mm x 1.25 x 20mm bolts. Finish with the 8mm washers, 8mm lock washers and 8mm x 1.25 nuts (Fig.2).

3. Attach the air cylinder to the adaptor.



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.