



SEAT ADAPTER KIT #88302 INSTALLATION INSTRUCTIONS





4851-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

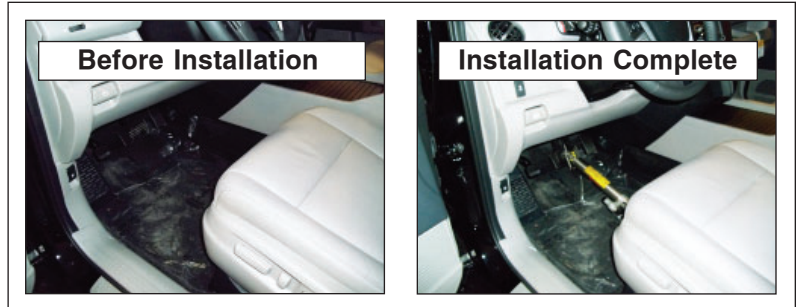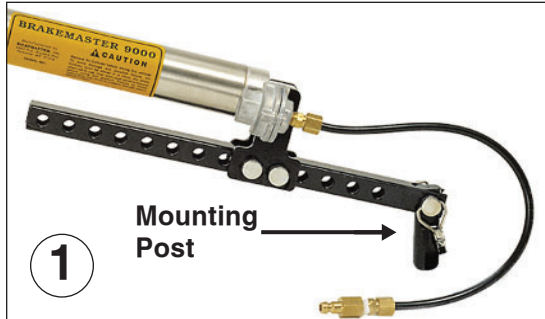

Instructions

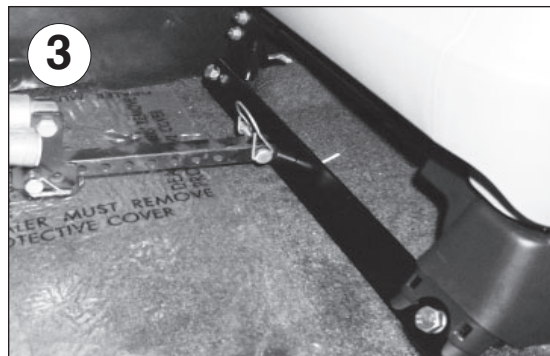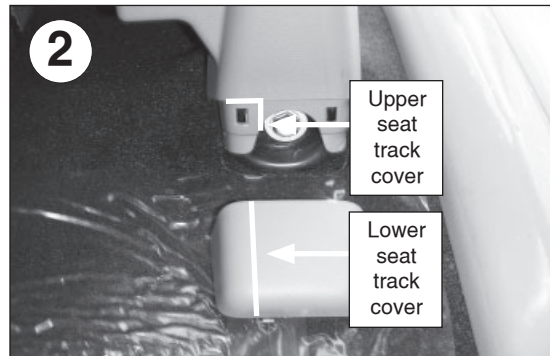

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included $3/8"$ x $3/4"$ bolt and $3/8"$ lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Snap off the plastic seat track covers on each side of the driver's seat and remove the two 14mm (head) front seat track bolts.
3. Trim the upper and lower seat track covers as show in Figure 2.
4. Place the seat adapter over the holes you exposed in step 2 and bolt it into place using the two supplied 10mm x 1.25 x 45mm bolts, 10mm lock washers and $3/4"$ x 1" x $1/4"$ wall pipe spacers. *Note:* position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
5. Attach the air cylinder to the adapter (Fig.3).

Parts List

- (1) $3/8"$ lock washer
- (1) $3/8"$ x $3/4"$ bolt
- (2) 10mm x 1.25 x 45mm bolts
- (2) 10mm lock washers
- (2) $3/4"$ x 1" x $1/4"$ wall pipe spacers



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.