21-800-669-9690 SEAT ADAPTER KIT #88314 INSTALLATION INSTRUCTIONS




www.roadmasterinc.con

5288-02

ROADMASTER, Inc.

6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE fax 360-735-9300

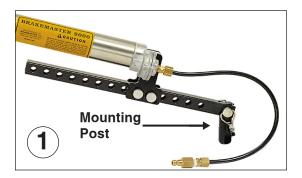



Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.


2. Push the seat all the way back and remove the two seat track bolt covers (Fig.2). Then, remove the two 14mm (head) bolts from the front seat track (Fig.3).

3. Place the seat adapter under the seat tracks and bolt using the two supplied 10mm x 1.25 x 35mm bolts, 10mm lock washers and 3/8" flat washers (Fig.4). Note: position the adapter so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Note: it may ease installation if you loosen the rear seat track bolts for this step.

continued on next page

Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 3/8" flat washers
- (2) 10mm x 1.25 x 40mm bolts
- (2) 10mm lock washers

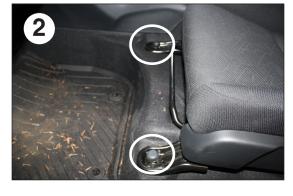







ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

