


SEAT ADAPTER KIT #88316 INSTALLATION INSTRUCTIONS



5360-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

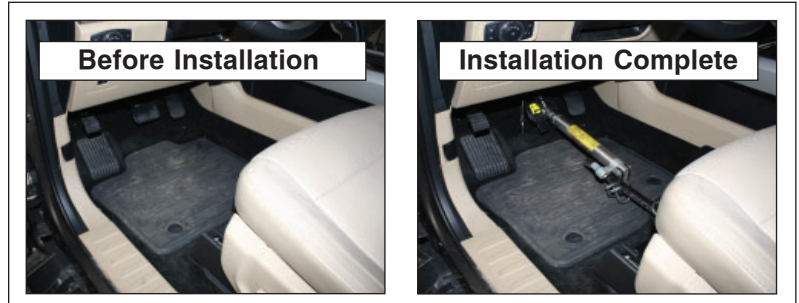

Instructions



1. Push the seat all the way back and remove the two seat track covers (Fig.1). *Note:* they will not be replaced. Now, remove the two 13mm (head) seat track bolts (Fig.2).

2. For each mount, place one of the supplied 1" O.D. x .188 x 1½" spacers over the hole. Then, place the seat adapter over the spacers and bolt down through the spacers on each side using the supplied 10mm x 1.5 x 75mm bolt, 10mm lock washer and 3/8" flat washer (Fig.3).



3. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

Parts List

- | | |
|--|-----------------------------|
| (2) 10mm lock washers | (2) 10mm x 1.5 x 75mm bolts |
| (2) 1" O.D. x .188 wall x 1½" pipe spacers | (2) 3/8" flat washers |



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.