



SEAT ADAPTER KIT #88317 INSTALLATION INSTRUCTIONS



5431-02

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

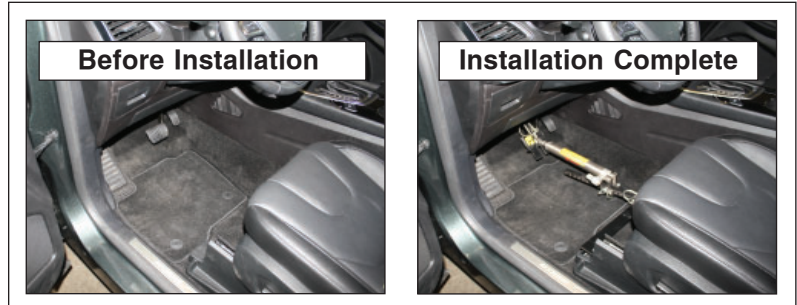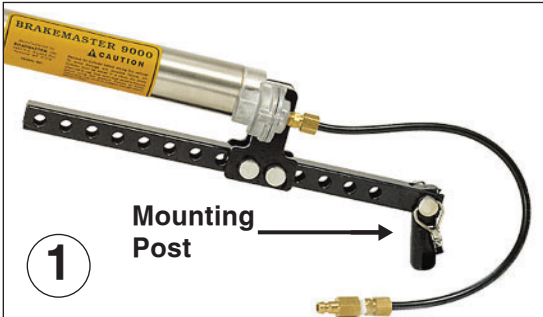

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Push the seat all the way back and remove the two seat track covers by prying up from the bottom. Now, remove the two 13mm (head) seat track bolts (Fig.2).

3. For each mount, place one of the supplied 1" O.D. x .188 x 1 3/4" pipe spacers over the hole. Then, place the seat adapter over the spacers and bolt down through the spacer on each side using the supplied 10mm x 1.5 x 75mm bolt, 10mm lock washer and 3/8" flat washer (Fig.3). *Note:* the adapter is not symmetrical. Make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

Parts List

- (2) 3/8" flat washers
- (2) 10mm lock washers
- (2) 10mm x 1.5 x 75mm bolts
- (2) 1" O.D. x .188 wall x 1 3/4" pipe spacers
- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt