


SEAT ADAPTER KIT #88321 INSTALLATION INSTRUCTIONS



5507-01

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

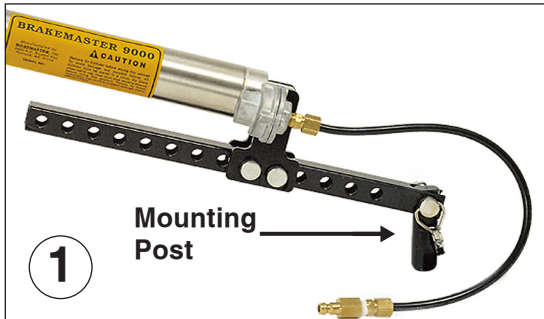

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

2. Push the seat all the way back and remove two 14mm (head) bolts (Fig.2).

3. Place the included 1" x 1" pipe spacers over the holes you exposed in the previous step and then place the seat adapter over the pipe spacers. Bolt down through the seat adapter and into the floor pan on each side using the supplied 10mm x 1.25 x 60mm bolt, 10mm lock washer and 10mm flat washer (Fig.3).

Note: make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

4. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

Parts List

- (2) 10mm flat washers
- (2) 10mm lock washers
- (2) 10mm x 1.25 x 60mm bolts
- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.