



# SEAT ADAPTER KIT #88330 INSTALLATION INSTRUCTIONS




5631-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

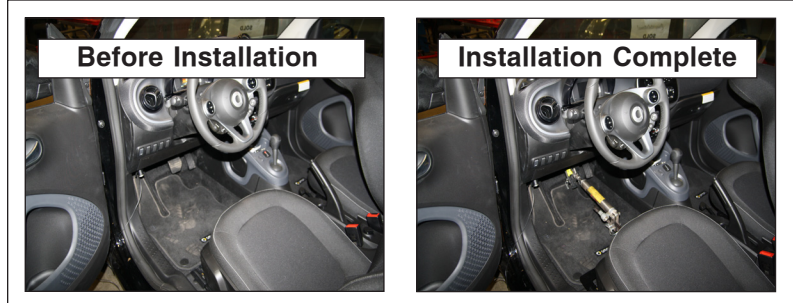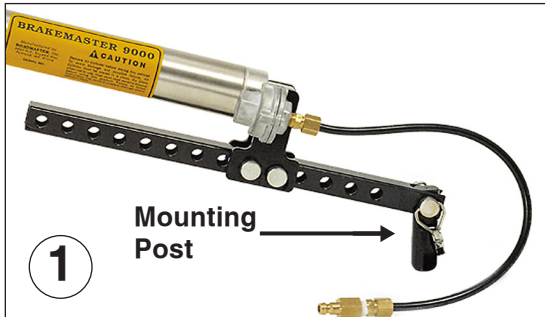

## Instructions

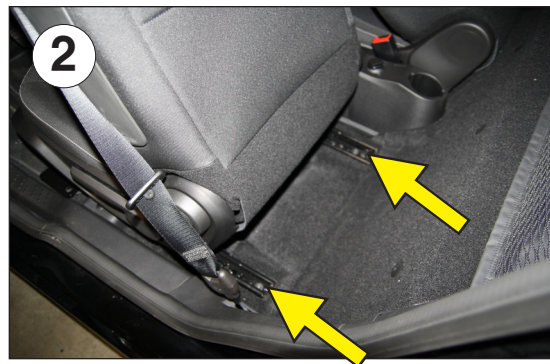

**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.



**2.** Loosen the two rear seat track bolts with a 3/8" socket (Fig.2). Then, push the seat all the way back and use a 3/8" socket to remove the two front seat track bolts (Fig.3).



**3.** Remove the seat track covers, and then place the seat adapter under the seat track and replace the bolts you removed in the previous step (Fig.3). *Note:* make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal. Then, tighten the rear seat track bolts.

**4.** Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt