




# SEAT ADAPTER KIT #88334 INSTALLATION INSTRUCTIONS

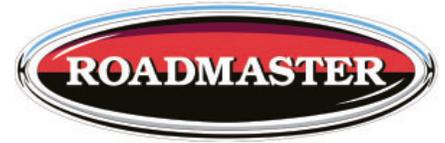

5783-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

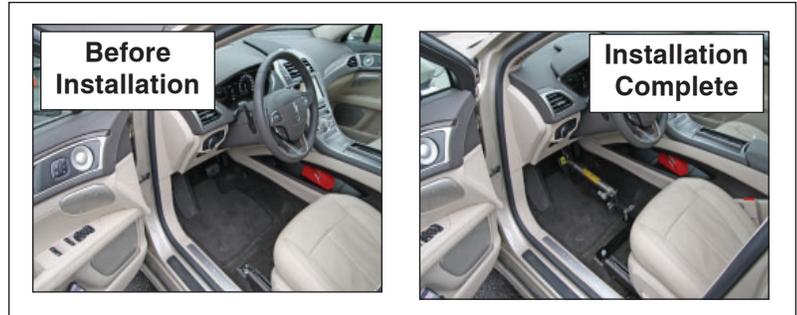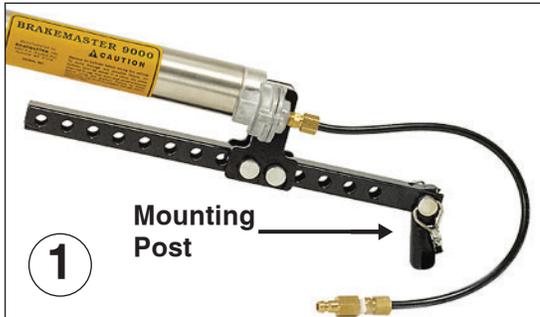

## Instructions

**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adapter using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

**2.** Remove the two plastic seat track covers (they will not be replaced). Then, remove the 13mm (head) factory seat track mounting bolts (Fig.2). *Note:* for newer models, the bolts may be two T55 Torx bolts instead.

**3.** Using the supplied 10mm x 1.25 x 60mm bolts, 3/8" flat washers, lock washers and the 1" x 1-1/8" x .188 wall pipe spacers, bolt the seat adapter into the weld nuts you removed the factory bolts from. *Note:* all Ford Fusion models use the two supplied 10mm x 1.5 x 60mm bolts. *Note:* place the pipe spacers between the seat track mounting holes and the seat adapter. Figure 3 shows the finished installation.

## Parts List

- (2) 10mm x 1.25 x 60mm bolts
- (2) 10mm lock washers
- (2) 3/8" flat washers
- (2) 1 x 1-1/8" x .188 wall pipe spacer
- (1) 3/8" x 3/4" bolt
- (1) 3/8" lock washer

For 2006 and later Ford Fusions:  
(2) 10mm x 1.5 x 60mm bolts



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.