




# SEAT ADAPTER KIT #88337 INSTALLATION INSTRUCTIONS



5864-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

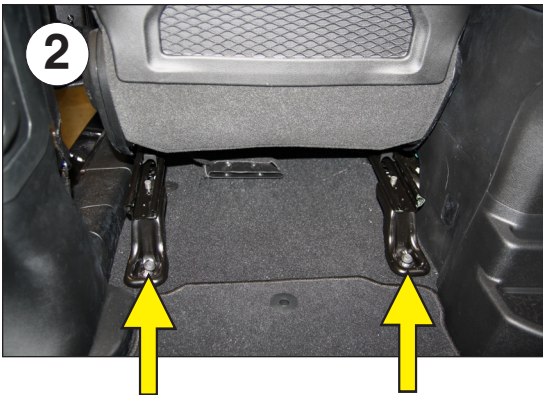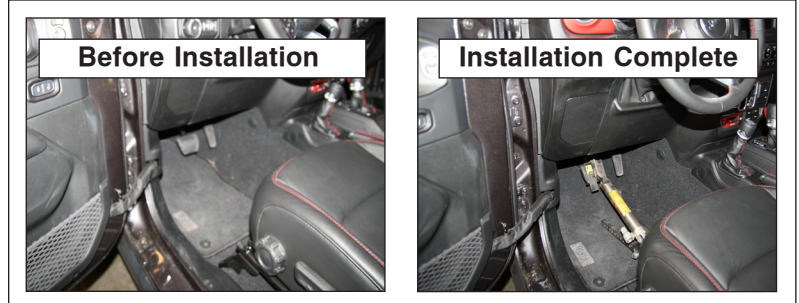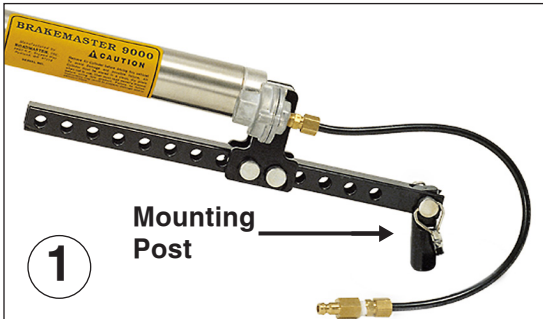

## Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the forward mounting bracket using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt included with this kit.
2. Push the driver's seat forward as far as it will go, and remove two T50 Torx seat track bolts (Fig.2). They will not be replaced.
3. Place the two supplied 1" x 1-1/8" pipe spacers over the holes you exposed in the previous step. Then, place the seat adapter over the pipe spacers. Bolt it into place on each side using a supplied 10mm x 1.5 x 55mm bolt, 10mm lock washer and 3/8" flat washer (Fig.3).
4. Push the seat back all the way and place the forward mounting bracket under the seat (Fig.4). Then, push the seat forward once again.

*continued on next page*

## Parts List

- |                             |                       |
|-----------------------------|-----------------------|
| (2) 1-1/8" pipe spacers     | (2) 3/8" flat washers |
| (1) 3/8" x 3/4" bolt        | (2) 3/8" nuts         |
| (2) 10mm x 1.5 x 55mm bolts | (2) 3/8" lock washers |
| (2) 10mm lock washers       | (2) 3/8" x 1" bolts   |



## WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.



1-800-669-9690

## SEAT ADAPTER KIT #88337 INSTALLATION INSTRUCTIONS




5864-00

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

ROADMASTER, Inc. 6110 NE 127th Ave. Vancouver, WA 98682 360-896-0407 fax 360-735-9300 www.roadmasterinc.com

continued from previous page

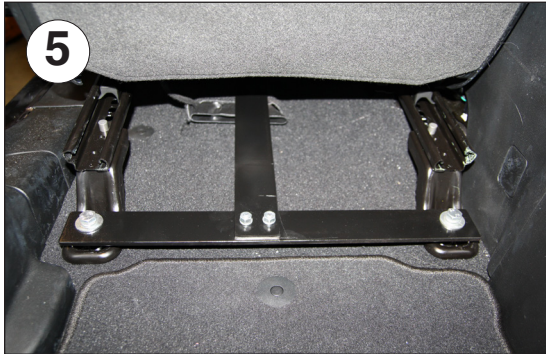

5. Attach the seat adapter to the forward mounting bracket by bolting up through the seat adapter and the forward mounting bracket using the supplied 3/8" x 1" bolts, 3/8" lock washers and 3/8" nuts (Fig.5). *Note:* make certain to position the adapter so that the mounting post is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

6. Attach the BrakeMaster to the brake pedal and to the seat adapter. Adjust the length of the air cylinder assembly, per the BrakeMaster installation instructions, ensuring that the BrakeMaster is pulling back on the brake pedal so the pedal is only depressed when the brakes are engaged at the motorhome. Failure to adjust the assembled length of the BrakeMaster may result in severe brake system damage and/or complete failure of the brakes.



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.