



U-BOLT KIT INSTALLATION INSTRUCTIONS

KIT#

26238, 2630, 2635


ROADMASTER, Inc.

6110 NE 127th Ave.

Vancouver, WA 98682

360-896-0407

www.RoadmasterInc.com

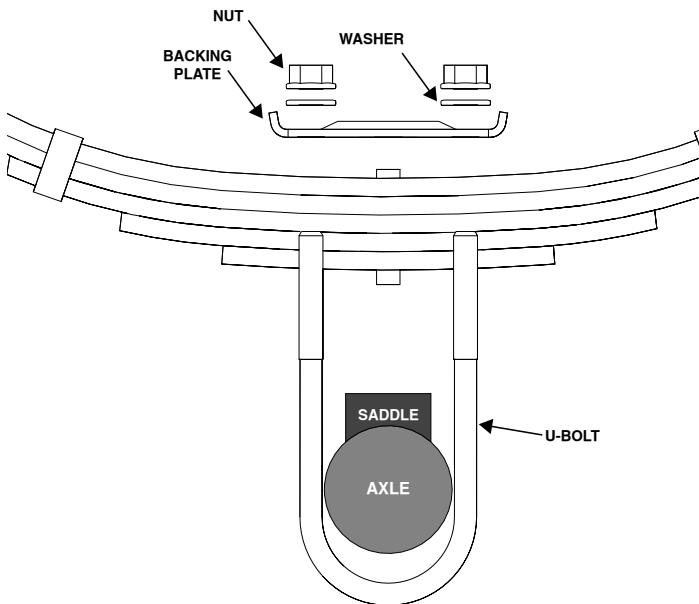

INSTALLATION

1. Park the vehicle on a flat, level surface. Take steps to secure the vehicle to prevent movement.
2. Remove the OEM U-bolts by carefully loosening and removing relevant nuts and washers. Set the U-bolts aside and do not reuse them, they should be discarded.
3. Position the new U-bolts over the axle and through the backing plate. Secure with included nuts and washers. Verify the axle is properly aligned before tightening.
4. Using a torque wrench, tighten all U-bolts to 130 lb-ft.
5. **IMPORTANT!** The U-bolts and leaf-spring stack will "settle" as the trailer is used. This settling slightly reduces clamping force, which can allow axle movement if not corrected. Accordingly, after the trailer has been towed 100 miles, you must check and re-torque the U-bolts to 130 lb-ft.

WARNING



Read all instructions before you install this product. Failure to understand how to install this product could result in property damage, personal injury or even death.

PARTS

Qty	Description	Part
1..... 2.....	U-BOLT BACKING PLATE FOR 2 3/8" AXLE.....	B004231
..... 2.....	U-BOLT BACKING PLATE FOR 3" AXLE.....	B004229
..... 2.....	U-BOLT BACKING PLATE FOR 3 1/2" AXLE.....	B004230
2..... 4.....	9/16" X 2 3/8" U-BOLT WITH NUTS.....	357448-00
..... 4.....	9/16" X 3" U-BOLT WITH NUTS.....	357446-00
..... 4.....	9/16" X 3 1/2" U-BOLT WITH NUTS.....	357447-00

REQUIRED TOOLS

- General hand tools
- Torque wrench, 7/8" Wrench & Sockets

IMPORTANT NOTES

- Do not reuse old U-bolts.
- Always use supplied hardware.
- Periodically inspect U-bolts during routine maintenance.
- Improper torque may result in component damage or unsafe towing conditions.

Need Help? Call Toll-Free
 1-800-669-9690